



VM9314

Operating Instructions



160 watts peak
40W x 4

CONTENTS

Thank you for choosing a Jensen product. We hope you will find the instructions in this owner's manual clear and easy to follow. If you take a few minutes to look through it, you'll learn how to use all the features of your new Jensen VM9314 Mobile Multimedia Receiver for maximum enjoyment.

Features	1
Optional Equipment	3
Warnings	4
Anti-Theft Feature	5
Controls and Indicators	7
Remote Control	9
Using the TFT Monitor	11
Operating Instructions	14
iPod Voice Control	19
Setup Menu	21
Tuner Operation	28
DVD/VCD Video Operation	32
DVD/CD Audio Operation	41
MP3 Operation	45
Viewing JPEG Photos	50
MPEG Movie Playback	51
XM [®] Radio Operation	53
iPod Operation	58
Bluetooth Operation	62
Rear Camera Function	71
Troubleshooting	72

FEATURES

Congratulations on your purchase of the Jensen VM9314 Mobile Multimedia Receiver.

It's a good idea to read all of the instructions before beginning the installation. We recommend having your Jensen VM9314 installed by a reputable installation shop.

DVD

- Aspect Ratio - Full and Normal
- Fast Forward - 2X, 4X, 8X and 20X
- Slow Motion - 2X, 4X, 8X and 20X
- Play, Pause, Stop, Next Chapter and Previous Chapter

CD / MP3 / WMA

- CD-Text Compatible
- ID3 Tag Compatible
- Directory Search (MP3 / WMA Only)
- Direct Track Access via Remote Control
- Burn up to 1500 MP3 and WMA Files onto a DVD+R / RW
- Audible Forward / Reverse Track Search (CD-DA Only)
- Random, Repeat and Intro
- Play, Pause, Stop, Next Track and Previous Track

HD Radio Tuner

- U.S.A. / Europe Frequency Spacing
- 30 Station Presets (18 FM / 12 AM)
- Auto Stereo / Mono
- Local / Distance
- Auto Store / Preview Scan

XM Radio Ready

- Requires XM CNP2000UC and CNPJEN1 (Both Sold Separately)
- XM Channel Name, Artist, Song and Categories Displayed on TFT Screen

iPod

- iPod via USB
- High Speed Direct Connect Interface to Access iPod Playlists, Artists, Albums and Songs. Play music and view video/photo* files from your iPod.
*Video/photo playback requires jLink-USB iPod interface cable (sold separately).
- Power Management Charges iPod while Connected

Chassis

- 1.0 DIN (Import / ISO-DIN Mountable)
- Motorized Flip-Out / Flip-Up LCD Screen
- 8 Character / Segment Type Secondary LCD Display
- 7" TFT Active Matrix LCD
- 1,152,000 Sub Pixels (480 x 2400)
- Screen Tilt / Angle Adjustment
- Heat Management System - Forced Air-Cooling to Keep the Chip-Sets Operating at Nominal Temperatures

General

- iPod Voice Control
- Navigation Ready (NAV102)
- Bluetooth Ready (with purchase of BTM15) providing hands-free profile for safety / convenience and A2DP profile for streaming music from a PDA / PMP
- 44-Key Infrared Remote Control
- One Composite Video Output for Additional Screens
- Front Panel Audio/Video Input
- Three-Band Tone Control (Bass, Mid and Treble) with Eight Preset EQ Curves
- Front Panel A/V Aux Input for Portable Media Devices
- Front, Rear and Subwoofer Line Output
- Programmable Volume Control
- Rear Camera Input (Normal and Mirror Image View)
- Touch Screen Calibration Mode
- 2VRMS Line Output - All Channels
- Rotary Encoder Audio Control
- SWC Interface – Compatible with PAC adapter SWI-PS Steering Wheel Control Interface, sold separately

*HD Radio™ Technology Manufactured Under License From iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD and HD Radio logos are proprietary trademarks of iBiquity Digital Corporation.

OPTIONAL EQUIPMENT

- **NAV102**

The VM9314 is "navigation ready." Before accessing any navigation features, you must purchase and install the navigation module (NAV102). All installation and operating instructions will be included with the navigation module.

Once the navigation module is connected and operating properly, the NAV source mode will become active. While the navigation module is not installed, the NAV option appears gray, indicating the function is not available.

- **Satellite Radio Tuner**

See "XM® Radio Operation" on page 53.

- **BTM15**

Before you can connect to a Bluetooth enabled device, you must purchase and install the Jensen BTM15.

- **Bluetooth Phone**

See "Bluetooth Operation" on page 62.

- **Rear Camera**

The VM9314 is "camera ready." Before accessing any camera features, you must purchase and install a rear video camera. Once the rear camera is connected and operating properly, the CAMERA source mode will become active. While the camera is not installed, the CAMERA option appears gray, indicating the function is not available.

WARNINGS

WARNING! Never install this unit where operation and viewing could interfere with safe driving conditions.

WARNING! To reduce the risk of a traffic accident (except when using for rear view video camera) never use the video display function while driving the vehicle. This is a violation of federal law.

WARNING! Never disassemble or adjust the unit.

WARNING! To prevent injury from shock or fire, never expose this unit to moisture or water.


WARNING! Never use irregular discs.

WARNING! To prevent damage to the mechanism inside this unit, avoid impact to the TFT monitor.

WARNING! The monitor employs an automatic motorized mechanism. To prevent damage to the core mechanism, please do not push, pull or swivel the monitor manually.


ANTI-THEFT FEATURE

The VM9314 is equipped with an anti-theft feature requiring the user to enter a password upon initial power on.

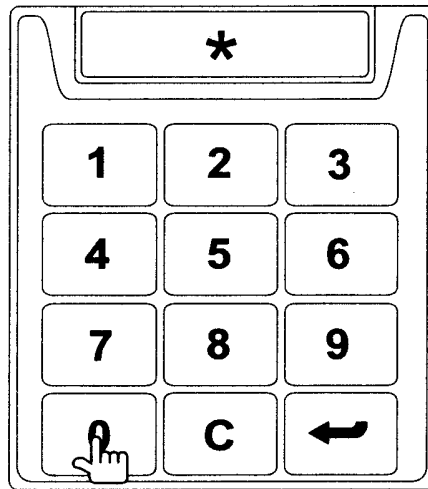

Entering the Default Password


The default user password is **012345** (6 digits). Enter the password using the on-screen keypad and then press the arrow (enter) button. You can also use the remote control keypad to enter the password.

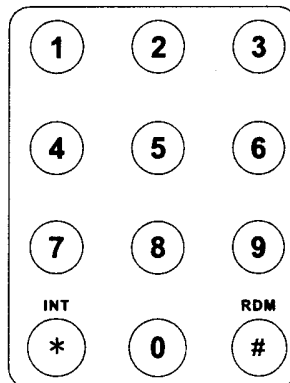


Press the **>||** button (30) on the remote control to confirm.

Changing the Password

To change the SECURITY password using the touch screen, perform the following steps:

1. Touch the  button to view the "SETUP" menu.
2. Touch **SECURITY** to view the "SECURITY" sub-menu.

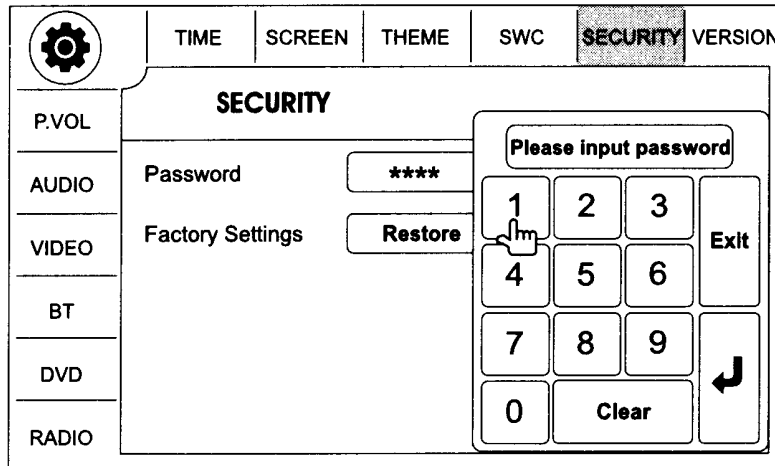

3. Enter the current password (default is 012345) and touch the arrow (enter) key.
4. Touch the "Password" field to open the on-screen keypad.
5. Enter a new 6-digit password and press the arrow (enter) button.

NOTE: If you forget your password, contact Customer Service at 1-800-323-4815 for assistance.

CONTROLS AND INDICATORS

1. Rotary Encoder

Rotate to adjust the volume. While in the audio menu, press and release to enter and/or confirm audio settings.

Press to activate the MUTE function and silence the receiver. Press again to resume sound.

2. SRC

Press to turn the unit on. *Press and hold* to turn the unit off.

When on, press to view the SOURCE menu.

3. IR Remote Control Receiver

4. USB Interface Connector

Connect a USB device for playback of music/video files.

5. TFT Display

6. 3.5mm A/V Input

Attach a compatible A/V device.

7. DISC SLOT

8. ▲ EJECT

Press to eject a disc.

Press and hold to reset core mechanism position.

9. SD Card Slot

Insert an SD/MMC card for playback of music/video files.

10. RESET

Press to reset system settings to factory default (except the password and parental lock setting).

11. LCD Display

12. TILT/ >>|

Press to activate the tilt function. Use the rotary encoder to make adjustments while the yellow tilt icon is flashing.

With the monitor closed, press to seek forward.

13. WIDE/|<<

Press to adjust the display aspect of the picture to one of two settings: Full, Normal or STANDBY.

With the monitor closed, press to seek backward.

When the NAV102 is connected to the VM9314, *press and hold* to display the navigation user interface. The TFT screen must be open for this function to operate.

14. PIC/BAND

Press and hold to view the setup menu. Touch "Screen" to adjust dimmer and backlight picture settings (see "SCREEN Sub-menu Features" on page 22).

With the monitor closed, press **BAND** to change between AM, FM or three XM bands.

15. CLOSE/OPEN

Press to activate the automatic mechanical system and move the TFT monitor into viewing position. Press again to close the TFT.


16. PTT/DISP

Press to activate the iPod Voice Control Feature.


With the monitor closed, press to view alternate LCD display information.

When the NAV102 is connected to the VM9314, *press and hold* to display the navigation user interface. The TFT screen must be open for this function to operate.

REMOTE CONTROL

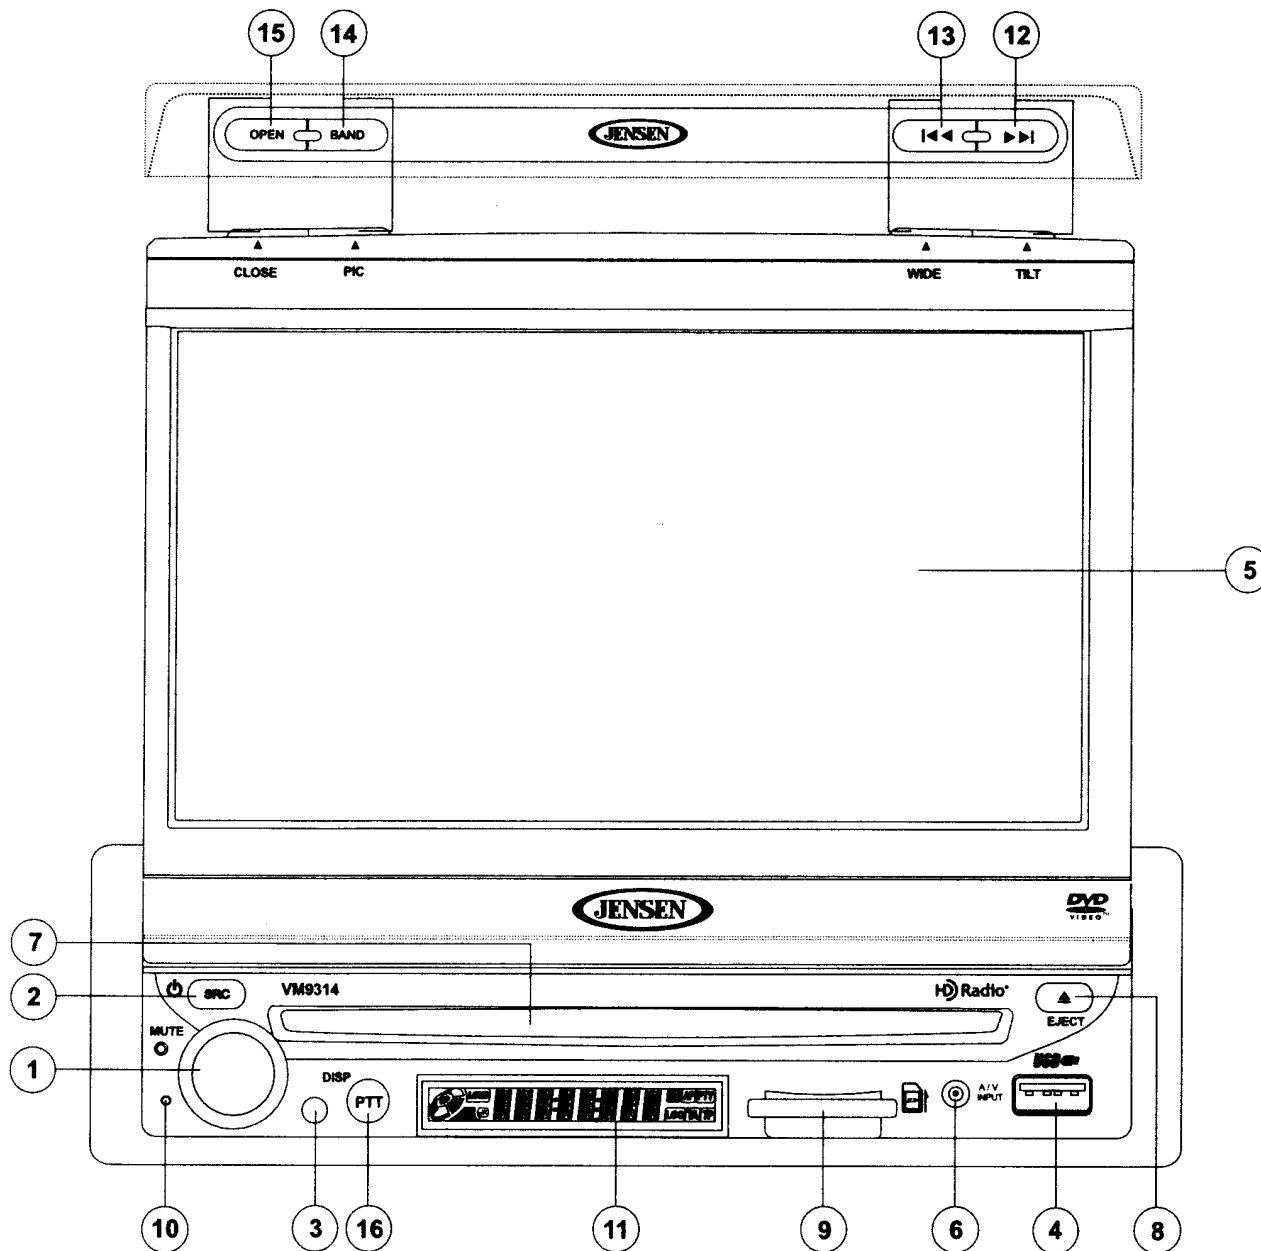


See remote control tables in various sections for button functions.

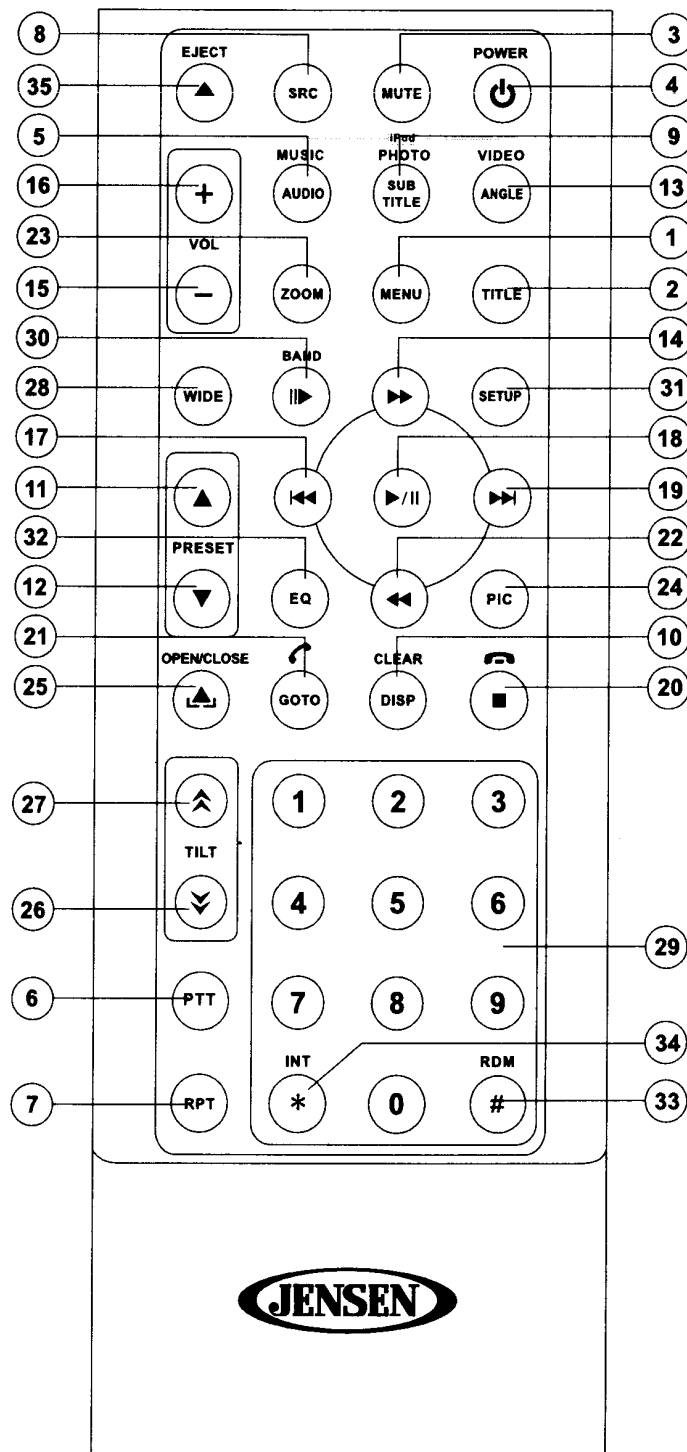

USING THE TFT MONITOR

Open/Close TFT Monitor

Open TFT Monitor


Press the **OPEN** button (15) on the front panel or press the () button (25) on the remote control to activate the mechanism that moves the display panel into the viewing position.

Close TFT Monitor

Press the **OPEN** button (15) on the front panel or press the () button (25) on the remote control to load the display panel back into the compartment.

TFT Monitor Auto Open

If “TFT Auto Open” is set to “Auto” when the unit is turned on, the monitor automatically moves to the viewing position.

If “TFT Auto Open” is “Off” when the unit is turned on, press the **OPEN** button (15) or () button (25) on the remote control to move the monitor into the viewing position.

If “TFT Auto Open” is set to “Manual”, the TFT will not close when the key is turned off.

Monitor Tilt Angle Adjustment

A known characteristic of LCD panels is the quality of the display in relationship to the viewing angle. The monitor angle can be adjusted for optimum viewing using one of the following methods:

Step by Step Angle Adjustment


- Press the (26) or (27) button on the remote control to adjust the tilt angle of the screen one step at a time.
- Press the **TILT** button (12) on the unit. While the yellow tilt icon is flashing, turn the rotary encoder to adjust the screen angle.

Continuous Angle Adjustment

Press and hold the (26) or (27) button on the remote control to adjust the tilt angle in a continuous motion.


Aspect Ratio

Press the **DISP** button (10) on the remote control or **WIDE** button (13) on the monitor to adjust the aspect ratio as follows:

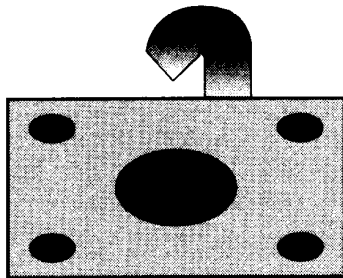

FULL

The entire screen is extended horizontally to the aspect ratio of 16 to 9. The extension ratio is the same at any point.

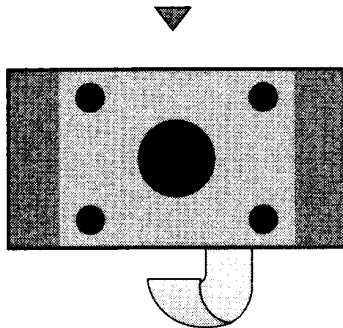

NORMAL

The conventional display image has a 4 to 3 ratio of horizontal to vertical, leaving a blank area on the right and left sides of the display.

STANDBY

Screen becomes black. Touch screen to resume.

Parking Brake Inhibit

When the pink "Parking" wire is connected to the vehicle Parking Brake circuit, the front TFT monitor will display video when the Parking Brake is engaged. (When the pink wire is grounded via the Parking Brake circuit, video will be displayed.)

Monitor Movement Mechanism

If an obstruction occurs in the monitor path, the following protective measurements can be executed to prevent damage to the mechanism or monitor:

Table 1: Monitor Protective Measures

Obstruction	Self Protection	OPEN Button Pressed	Power Reconnected
Monitor loading out horizontally	Monitor is automatically loaded into unit	Monitor fully extended horizontally	Monitor is automatically loaded into unit

Table 1: Monitor Protective Measures

Obstruction	Self Protection	OPEN Button Pressed	Power Reconnected
Monitor loading in horizontally	Unit stops at obstruction point	Monitor fully extended horizontally	Monitor is automatically loaded into unit
Monitor loading out vertically	Unit stops at obstruction point	Monitor swivels back to the unit	Monitor swivels back to the unit
Monitor loading in vertically	Unit stops at obstruction point	Monitor swivels back to the unit	Monitor swivels back to the unit

After the protective procedure is executed, normal operation is resumed by pressing the **OPEN** button (15) or disconnecting and reconnecting the power.

OPERATING INSTRUCTIONS

Power On / Off

Press the **⏻**/SRC button (2) on the unit (or the **⏻** button (4) on the remote control) to turn the unit on. The buttons on the front of the unit light up and the current mode status appears in the LCD (11). You can also turn on the unit by pressing the **OPEN** button (15) and opening the TFT screen.

*Press and hold the **⏻** button to power off the unit. The monitor is drawn back into the main compartment.*

Remote Control Functions

Table 2: Common Remote Control Functions

SRC	Select playing source
MUTE	Toggle audio output on/off
POWER/⏻	Turns the power on/off
VOL -	Decreases volume
VOL +	Increases volume
MENU	View SOURCE menu
SETUP	View the system setup menu
 ◀ ▶▶ ◀◀ ▶▶	Screen navigation (does not apply to all screens/menus)
▶ 	Enter command during menu navigation or Play/Pause
⏮	Open/close TFT monitor
1-9, 0, *, #	Direct entry
PIC	View setup menu and touch "SCREEN" to adjust auto dimmer and backlight
OPEN/CLOSE	Open/close TFT monitor
EQ	Access equalizer menu
⏴ / ⏵ b	Adjust monitor angle up/down
PTT	Push to talk

Mute/Line Mute


Press the rotary encoder button (1) on the front panel or the **MUTE** button (3) on the remote to mute the volume from the unit. Press the rotary encoder button again to restore the volume. "MUTE" is displayed on the LCD. Adjusting the volume or using any of the audio setup features cancels the mute function. If the "MUTE" wire is connected, audio output mutes when a telephone call is received by the car phone (using optional BTM15) or when verbal navigation is played (using optional NAV102).

Playing Source Selection

When the monitor is closed, press the **SRC** button on the front panel (2) or remote control (8) to change between available audio playing sources in the following order: RADIO, DISC, USB/iPod, SD, BT, NAV, SAT, AUX1, AUX2 and CAMERA. The mode is displayed on the LCD screen.

Source Menu

You can also use the touch screen to change the source through the **SOURCE MENU**. To access the **SOURCE MENU**, touch the top left corner of the screen or press the **SRC** button on the front panel (2) or remote control (8).

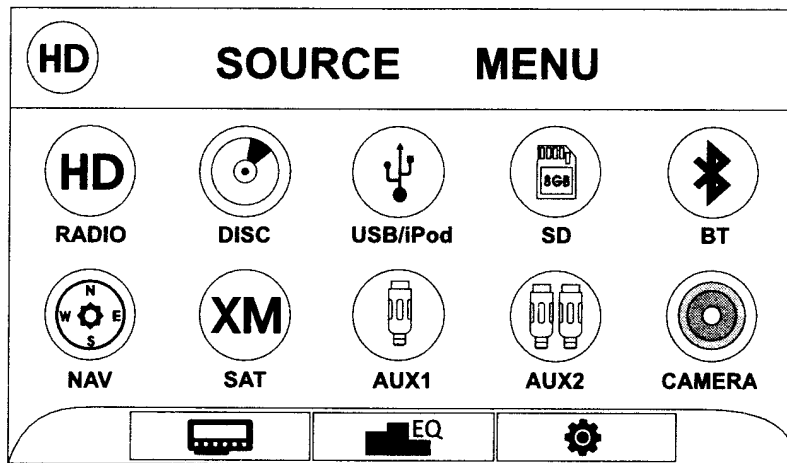

Touch the RADIO, DISC, USB/iPod, SD, BT, NAV, SAT, AUX1, AUX2 or CAMERA button to select the corresponding source.


You can also use voice control to select a source. See "iPod Voice Control" on page 19.

NOTE: When an iPod/iPhone is attached to the USB port, "IPOD" appears instead of the text "USB/iPod."

NOTE: You can press and hold to drag the “Source Menu” icons and rearrange them based on your preference

External Devices

External peripheral devices, including a game console, camcorder, navigation unit, iPod, Zune, etc. can be connected to this unit via RCA output using the A/V Media Adapter Cable (included).

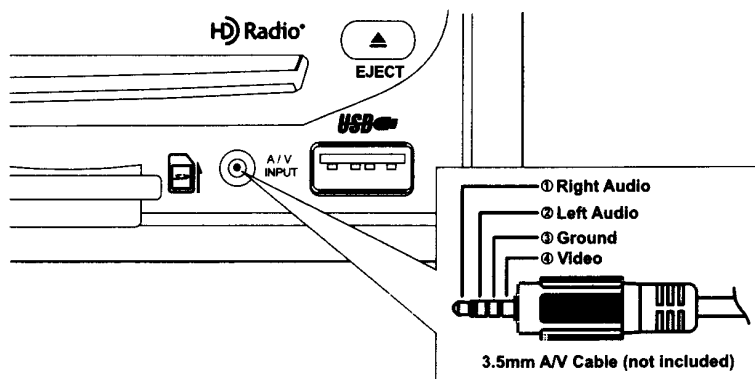

Connect the external device to the A/V Media Adapter Cable and then plug the cable into the **A/V INPUT** connector (6) on the front of the radio. Select “AUX 1” mode to access the front A/V input or “AUX 2” mode for the rear aux input. You cannot directly control external devices connected to the **A/V INPUT**. For information regarding the use of USB/SD devices, see “Inserting a USB Device” or “Accessing an SD Card” on page 46.

Micro SD Slots (for service use only)

The micro SD slot, located behind the monitor, cannot be used for file playback. This input is for use by service professionals only for software updates.

Volume Adjustment

Volume Increase/Decrease

To increase or decrease the volume level, turn the rotary encoder (1) on the front panel or press the **VOL-/+** buttons (15, 16) on remote control. When the volume level reaches “0” or “40”, a beep sounds, indicating that the adjustment limit has been reached. The LCD or TFT screen displays the volume level for 3 seconds.

Programmable Turn-On Volume


This feature allows the user to select a turn-on volume setting regardless of the volume setting prior to turning the unit off. To use this feature, the TFT monitor must be displayed.

To program a specific turn-on volume level, turn the rotary encoder (1) to adjust the volume to the desired turn-on volume. *Push and hold* the rotary encoder while the yellow speaker icon and level indication is displayed on the screen. The unit will beep to confirm your turn-on volume setting.

Audio Control Menu

The Audio Control feature allows you to easily adjust your audio system to meet the acoustical characteristics of your vehicle, which vary depending on the type of vehicle and its measurements. Proper setting of the Fader and Balance boosts the effects of the cabin equalizer.

Touch the button on the screen or press the **EQ** button (32) on the remote control to display the audio menu.

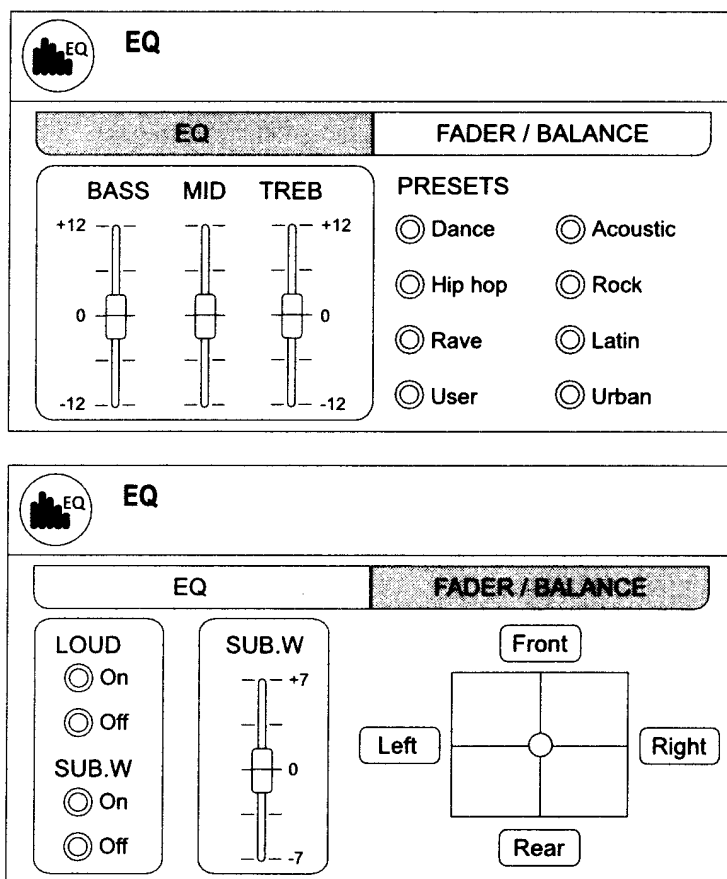

- The EQ menu appears by default. Touch “FADER / BALANCE” to view the second screen and adjust LOUD, SUB.W and FADER settings.

- Use the touch screen to adjust the settings for an audio feature.

Table 3: Audio Adjustments

Audio Function	Adjustable Range
EQ (NOTE: The "User" setting is automatically selected when individual BASS, MID and TREB settings are modified.)	Dance
	Hip hop
	Rave
	User
	Acoustic
	Rock
	Latin
	Urban
BASS	-12 to +12
MID	-12 to +12
TREB (treble)	-12 to +12
SUB.W	-7 to +7
FAD	Grid
BAL	Grid

The Audio menu will automatically exit after a few seconds of inactivity. To exit quickly, touch the top left corner of the screen.

System Reset

To correct a system halt or other illegal operation, use the tip of a pen to press the reset button (10) located on the front bottom-right corner of the unit. After a system reset, the unit restores all factory default settings.



NOTE: If the unit is reset while a DVD is playing, the DVD resumes play once the reset is complete.

iPod VOICE CONTROL

You can navigate your iPod/iPhone music library and change the source/mode using the latest in voice recognition technology, allowing you to enjoy a more handsfree experience so you can focus on driving.

The VM9314 is provided with a high quality active microphone for voice control. This microphone should be mounted as close to the driver as possible, preferably on the visor directly above the driver, for best voice recognition.

NOTE: Upon initial connection, depending on the number of songs and the size of iPod/iPhone storage, the index time (radio retrieving and storing song information from the iPod/iPhone for voice control access) may require a few minutes to read all the data for a large song collection. Future indexing time will be shorter, as the radio will only add to the information that has changed since the last index.

Along with a predefined set of basic voice commands, the iPod voice control system can also interpret keywords to determine if you're searching for a particular song or artist.

Acceptable Commands

- iPod Playback Controls
 - Play
 - Pause
 - Stop
 - Next
 - Previous
 - iPod Artist and Song Title
 - *Plus* natural speech keyword recognition
- Source/mode selection
 - Radio (HD Radio)
 - Satellite (XM Radio)
 - USB
 - iPod
 - SD
 - Bluetooth
 - DVD
 - Navigation

Basic Voice Operation

1. To activate the voice control function, touch the **PTT** button on screen or on the remote control (7). The **PTT** button is located on the left side of most screens, but is not present on all screens.
2. The system displays the voice icon along with the text "Please say your command" at the top of the screen.
3. The system "listens" for a command for 5 seconds.
4. Speak a command into the microphone within 5 seconds.
 - If speech is not detected, the system displays "No speech."
 - If the speech is not recognized, the system displays "Not recognized."
 - If the speech is recognized, the system displays the command at the top of the screen and carries out the requested operation.
5. Repeat previous steps, as necessary.

NOTE: While we have a very sophisticated voice recognition algorithm in the VM9314, voice commands must be spoken clearly and distinctly. Outside variables such as wind noise and conversation in the automobile may affect the radio's ability to recognize speech commands. We advise attempting voice commands with the windows closed.

Using Natural Speech to Access your iPod/iPhone Music Library

While in iPod/iPhone mode, you can use natural speech to access the music library. The voice control system can recognize keywords and retrieve and play the desired song or artist.


For example, you can say "I'd like to hear some Nirvana" and the system will search for Nirvana songs and play them in the order retrieved. You can even get more specific and say "How about Smells Like Teen Spirit by Nirvana" and the system will search for and play the specified song, provided the the song is present in the music library.

Steering Wheel Control

The VM9314 offers the option to re-program one of your steering wheel controls to operate as the "PTT" (Push To Talk) control on the VM9314, allowing for a truly hands-free music management experience. See "SWC (Steering Wheel Control) Sub-menu Features" on page 23.

SETUP MENU

To access system settings, touch the  button on the screen to enter the setup menu. The “TIME” sub-menu appears highlighted in yellow.

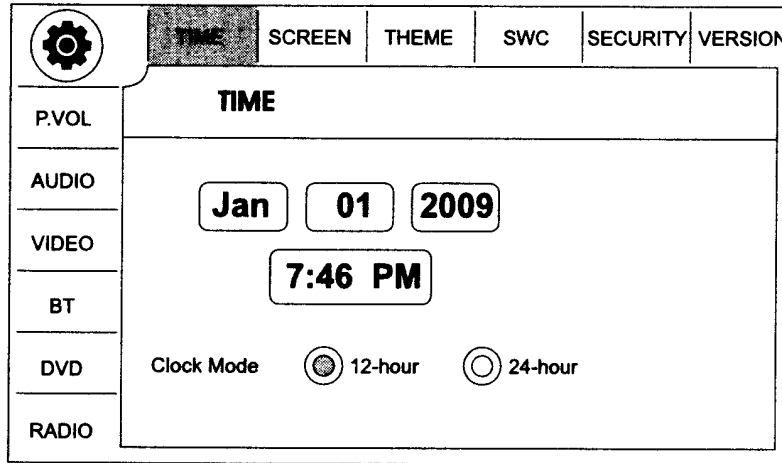

Accessing Menu Items

Touch to select a sub-menu (Screen, Theme, SWC, etc.).

The features available for adjustment under the highlighted sub-menu option will appear in the center of the screen.

Adjusting a Feature

1. Use the touchscreen to select the feature to be adjusted.
2. Touch to select an option for the feature you want to adjust.

TIME Sub-menu Features

Setting	Options	Function
Clock Mode	12-hour	Clock displays 12 hour time using AM and PM.
	24-hour	Clock displays 24 hour time up to 23:59.
Month	Jan-Dec	Touch to view the direct entry keypad. Enter numeric equivalent of current month (1-12) and touch the enter key.
Day	01-31	Touch to view the direct entry keypad. Enter current day of the month (01-31) and touch the enter key.
Year	20__	Touch to view the direct entry keypad. Enter current year of the month (20__) and touch the enter key.
Hour	1-12	Touch to view the direct entry keypad. Enter current hour and touch the enter key.
Minutes	00-59	Touch to view the direct entry keypad. Enter current minutes and touch the enter key.
AM/PM	AM/PM	Touch to toggle AM/PM. Feature is not displayed when 24-hour Clock Mode is selected.

SCREEN Sub-menu Features

Setting	Options	Function
TFT Auto Open	Auto	The TFT panel automatically opens when the unit is turned on.
	Manual	When the ignition is turned OFF, the TFT panel DOES NOT retract if it was previously out.
	Off	You must press the OPEN/CLOSE button (15) to open the TFT panel.
Auto Dimmer	On	Screen automatically dims/brightens for optimal day and night viewing.
	Off	Screen remains a constant brightness.
Backlight	0-12	Touch the +/- buttons to adjust the backlight brightness level.
TS Calibration	Adjust	After entering calibration mode, a crosshair + appears in a corner quadrant of the screen. To begin calibration, press and hold the crosshair for one second until it moves to the next quadrant. Continue for each quadrant until the calibration is completed.

THEME Sub-menu Features

Setting	Options	Function
Wallpaper	Various	Choose from 12 different background images for your SOURCE MENU.

Setting	Options	Function
OSD	English	English is the only available On Screen Display option.
DEMO	Run	Demo scrolls through the various source screens, simulating activity on the display. "Demo" is displayed in the top left corner of the screen, to indicate the unit is in Demo Mode. To stop Demo Mode, press the upper-left quadrant of the TFT (Source select).

SWC (Steering Wheel Control) Sub-menu Features

The VM9314 is compatible with the PAC (Pacific Accessory Corporation) steering wheel control adapter SWI-PS. A 3.5mm female connector (labeled "SWC Interface") on the back of the head unit allows connectivity to the PAC adapter. Please refer to the instructions included with the PAC adapter for detailed installation information.

The SWC menu allows you to assign different functions to the SWC buttons. To change a button assignment, touch the function name and follow the instructions in the pop-up window.

The following default controls are available for most vehicles:

1. Vol Down
2. Vol Up
3. Mute
4. Seek Down / Previous Track / ** Preset Down
5. Seek Up / Next Track / ** Preset Up
6. SRC (Source)
7. ** Select
8. ** Select
9. Band

** If additional steering wheel control buttons are available on the vehicle, function 7 / 8 may be assigned the "Select" feature. This feature / function may not be available on some vehicles. If "Select" (function 7 or 8) is held down and function 4 is pressed momentarily, Preset Up will be selected. If "Select" (function 7 or 8) is held down and function 5 is pressed momentarily, Preset Down will be selected.

NOTE: *The VM9314 offers the option to reprogram one of your steering wheel controls to operate as the "PTT" (Push To Talk) control on the VM9314 to activate voice control for a truly hands-free music management experience.*

SECURITY Sub-menu Features.

Setting	Options	Function
Password	*****	Enter the current password (default is 012345) and touch the arrow (enter) key to access SECURITY features. To change the password, touch the "Password" field to open the on-screen keypad. Enter a new 6-digit password and press the arrow (enter) button.
Factory Settings	Restore	Select "Restore" to restore the factory default settings.

VERSION Sub-menu Features

Selection the VERSION tab to view the model number and system software version information.

P.VOL Sub-menu Features

Setting	Options	Function
P.Vol Page 1	DISC	Increase or decrease relative volume for the specified source up to 6 decibels.
	RADIO	
	SD	
	USB	
	iPod	
P.Vol Page 2	BT	Increase or decrease relative volume for the specified source up to 6 decibels.
	AUX1	
	AUX2	
	NAV	
	SAT	

AUDIO Sub-menu Features



Setting	Options	Function
Loudness	On	Turn bass boost on/off
	Off	
DRC	On	Employ the Dynamic Range Control for better playback for low volumes.
	Off	
Sub-woofer	On	Turn the subwoofer on/off.
	Off	
Sub-woofer Filter	80Hz	Selecting a crossover frequency sets a cut-off frequency of the subwoofer's LPF (low-pass filter).
	120Hz	
	160Hz	

VIDEO Sub-menu Features

If the rear-view video camera is connected, the unit is on, and the TFT monitor is retracted inside the unit, the TFT monitor automatically moves into the viewing position and Camera mode is selected upon shifting into REVERSE gear. When shifting into DRIVE gear, the TFT monitor is retracted back inside unit.

Setting	Options	Function
Camera In	Normal	Display camera image as captured.
	Mirror	Reverse the camera image as if looking through a rear-view mirror.
	Off	Disable rear camera function.
Video Input	Auto	Input circuitry automatically detects the video signal from the Aux In source. The color signal output is switched automatically based on the current video input signal to NTSC or PAL.

BT (Bluetooth) Sub-menu Features

Setting	Options	Function
Bluetooth	On	Enable Bluetooth function.
	Off	Disable Bluetooth function.
Auto Answer	On	The unit automatically answers all incoming calls.
	Off	Manually answer calls by touching the  button.
Auto Connect	On	Automatically connect when your paired phone is in range.
	Off	Connect the last active mobile phone by touching the  icon when disconnected.
Pairing Code	****	The default code is "1234". Touch the keypad icon to open the keypad and enter the pairing code or pass key required for Bluetooth connection to your mobile phone. Not all phones/devices require a pairing code. The default code is "0000" for many models.

DVD Sub-menu Features

If a DVD supports more than 1 Subtitle or Audio language, all the languages are available for selection during playback. If the selected language is not supported by the DVD, then the default language is used.

Setting	Options	Function
Audio	English	DVD Audio is heard in English when the option is available.
Subtitle	English	DVD subtitles automatically appear in English when available.
DVD Menu	English	DVD menu (if applicable) is displayed in English.
Parental Ctrl	****	Enter a 4-digit password to activate the "Rating" feature.
	1. Kid Safe	Select the appropriate rating level for the intended audience. Once the rating feature is activated, you will need to enter the 4-digit code to override the block on programs rated higher than the selected rating level. For full access to programming choose the "Adult" rating level. <i>NOTE: After entering a correct password in the locked field, you can use any 4-digit password to re-lock the field. The password can be changed each time or you can reuse a previous password.</i>
	2. G	
	3. PG	
	4. PG-13	
	5. PG-R	
	6. R	
	7. NC-17	
	8. Adult	

NOTE: Record the password and keep it in a safe place for future reference. The rating for each disc is marked on the disc, disc packing, or documentation. If the rating is not available on the disc, the parental lock feature is unavailable. Some discs restrict only portions of the disc and the appropriate content will play. For details, please refer to the disc description.

RADIO Sub-menu Features


Setting	Options	Function
Tuner Area	U.S.A.	<ul style="list-style-type: none"> • AM Frequency Spacing - 10kHz • AM Frequency Band - 530kHz~1720kHz • FM Frequency Spacing - 200kHz • FM Frequency Band - 87.5MHz~107.9MHz
	Europe	<ul style="list-style-type: none"> • AM Frequency Spacing - 9kHz • AM Frequency Band - 522kHz~1620kHz • FM Frequency Spacing - 50kHz • FM Frequency Band - 87.5MHz~108.0MHz

Exiting the System Setup Menu

To exit setup mode and resume normal playback, touch the  button in the top left corner of the screen.


TUNER OPERATION

To access the radio (HD) screen, press the **SRC** button (2) on the front panel or remote control (8) or touch the top left corner of the screen to access the Source menu, and then touch the “RADIO” icon. With the screen closed, press the **SRC** button (8) on the remote control until “RADIO” appears on the LCD. The on-screen indicators and touch key areas for radio mode are outlined below.

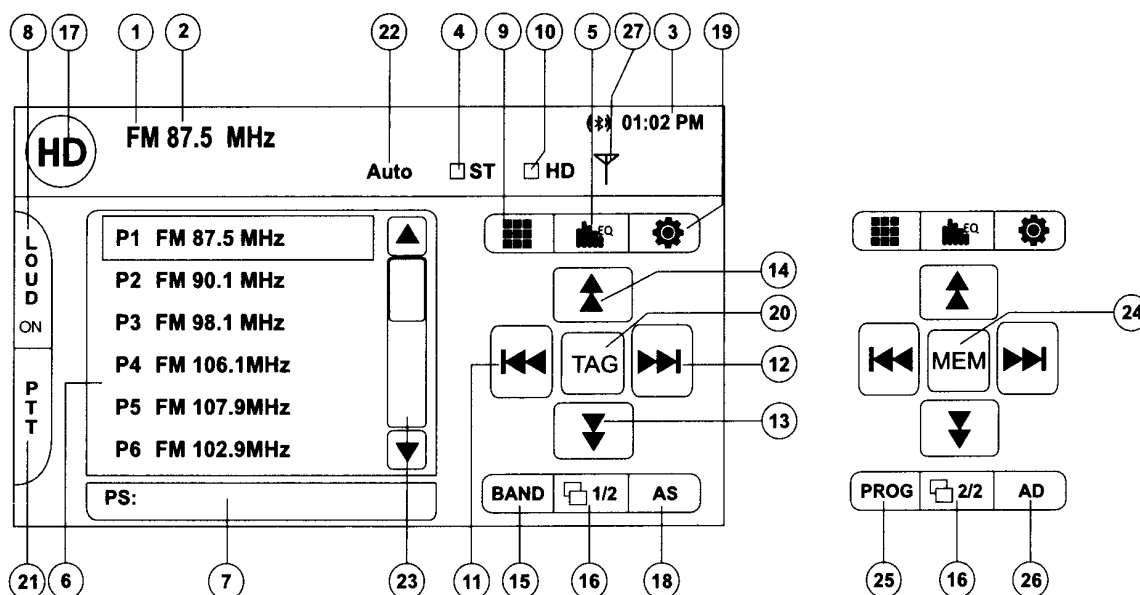

Indicators/Controls

1. Current radio band indicator
2. Radio frequency indicator
3. Clock
4. Stereo broadcasting indicator
5. : Equalizer adjustment screen
6. Recall preset stations
7. Information about the current function
8. **LOUD**: Turn the Loudness function ON/OFF
9. : Access the direct entry screen
10. HD signal broadcasting indicator
11. : Seek tuning lower
12. : Seek tuning higher
13. : Incremental tuning lower
14. : Incremental tuning higher
15. **BAND**: Change between AM/FM bands
16. **1/2**: View a second screen of menu choices

17. (a) Current source
(b) Touch to view the **SOURCE MENU** and select a new source
18. **AS**: Scan and automatically store strongest received stations
19. : View the **SETUP** menu
20. **TAG**: Tag the current song for possible iTunes download. If an iPod is connected, the tag goes directly to the iPod/iPhone. If no iPod is connected, the unit stores the tag (up to 64) for transfer to the iPod later.
21. **PTT**: Activate the Push To Talk voice recognition feature. See "iPod Voice Control" on page 19.
22. Analog/Digital/Auto signal tuning indicator
23. Touch the arrows and scroll bar to navigate the list
24. **MEM**: View screen used to enter current channel into preset memory
25. **PROG**: Activate choose a program type for tuning
26. **A/D**: Choose between Analog, Digital and Auto tuning modes
27. Signal strength indicator

Remote Control Functions


Table 4: Tuner Remote Control Functions

 ▶ / BAND	Select AM/FM band
 ◀	Seek tuning lower
▶ 	Seek tuning higher
◀◀	Incremental tuning lower
▶▶	Incremental tuning higher
▶ 	Confirm (enter) direct entry
PRESET ▲ / ▼	Navigate preset station list
1-9, 0, *, #	Direct entry
EQ	Access equalizer menu
GOTO	Access direct entry keypad
PTT	Push to talk
TAG	Tag the current song for possible iTunes download

NOTE: The **BAND** button on the unit only works when the TFT is closed.

Direct Tuning

To enter a radio station directly, touch the button or press the **GOTO** button (21) on the remote control to display the direct entry menu.

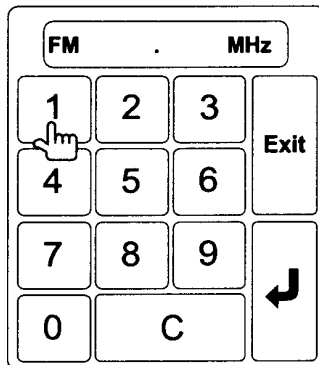


Enter the desired radio station using the on-screen number pad. Press the arrow (enter) button to tune to the selected station. To exit the screen without changing the station, touch **Exit**. To clear your entry and start over, touch **Clear**.

Using Preset Stations

Eighteen numbered preset buttons store and recall stations for the AM and FM band. All eighteen stored stations (P1-P18) for the current band appear on the screen for immediate recall.

Storing a Station


1. Select a band (if needed), then select a station.
2. Touch the on-screen **MEM** button (24) on page 2/2 to open the preset screen.

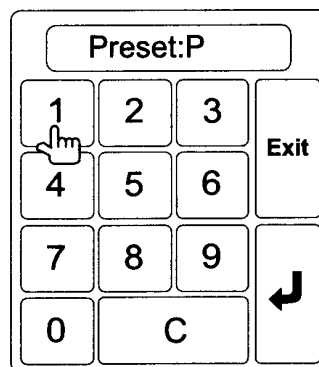

3. Touch to enter the preset number in which you would like to store the current station (or touch **Exit** to cancel and close the menu). The preset number and station appears highlighted in the list.

Recalling a Station

1. Select a band (if needed).
2. Touch an on-screen preset button (6) to select the corresponding stored station.

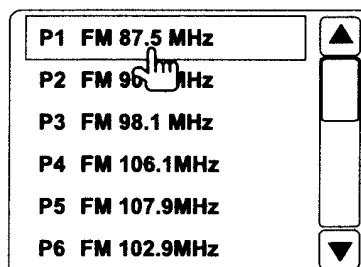**Auto Store (AS)**

To select 18 strong stations and store them in the current band:

1. Select a band (if needed).
2. Touch the **AS** button (18) on page 1/2 of the on-screen controls to activate the Auto Store function.

The new stations replace stations already stored in that band.

DVD/VCD VIDEO OPERATION

NOTE: When properly installed, DVD video cannot be displayed on the main TFT screen unless the parking brake is applied. If you attempt to play a DVD while the vehicle is moving, the TFT screen displays **"WARNING!!! It is illegal to view video while driving or operating a motor vehicle, Set parking brake to view video."** Rear video screens, if applicable, will operate normally.

Opening/Closing the TFT Video Screen

Opening the TFT Screen

To open the TFT video screen, press the **OPEN/CLOSE** button (15). The unit beeps and then opens.

Closing the TFT Screen

Press the **OPEN/CLOSE** button (15) again to close the TFT screen. If the screen is in the "IN" position, it moves out before closing.

Inserting a Disc

Upon inserting a DVD disc in the disc slot (7), DVD mode is entered and disc play begins.

NOTE: If Parental Lock (Rating) is activated and the disc inserted is not authorized, the 4-digit code must be entered and/or the disc must be authorized (see "VIDEO Sub-menu Features" on page 25).

You cannot insert a disc if there is already a disc in the unit or if the power is off.

NOTE: DVD-R and DVD-RW will not play unless the recording session is finalized and the DVD is closed.

Ejecting a Disc

Press the **▲** button (8) on the unit or remote control (35) to eject the disc. The unit automatically reverts to Tuner mode. You may eject a disc with the unit powered off. The unit will remain off after the disc is ejected.

Resetting the Loading Mechanism

If the disc loads abnormally or an abnormal core mechanism operation occurs, *press and hold* the **▲** button (8) on the unit or remote control (35) to reset the loading mechanism. Normal operation resumes.

Accessing DVD Mode

To switch to DVD mode when a disc is already inserted, press the **SRC** button (2) on the front panel or remote control (8) to access the SOURCE MENU. Touch the “DISC” icon.

Table 5: DVD/VCD Remote Control Functions


Button	Function	
Name	DVD	VCD
MENU	Access DVD menu.	Turns on/off PBC when playing VCD
TITLE	Enter the title menu of the disc	
AUDIO	Select alternate audio language	Select Left Channel, Right Channel, Mix or and Stereo output
RPT	(x1) Repeat Chapter, (x2) Repeat Title, (x3) Repeat Off	(x1) Repeat Single (x2) Repeat All (x3) Repeat Off (with PBC Off)
■	Stop playback	Stop playback
▶/ 	Resume playback Select option on DVD menu	Resume playback Select option on DVD menu
 ◀◀	Play previous chapter Navigate on-screen menu left	Play previous chapter Navigate on-screen menu left
▶▶ 	Play next chapter Navigate on-screen menu right	Play next chapter Navigate on-screen menu right
◀◀	Fast reverse (x2 → x4 → x8 → x20 → Play)	Fast reverse (x2 → x4 → x8 → x20 → Play)
▶▶	Fast forward (x2 → x4 → x8 → x20 → Play)	Fast forward (x2 → x4 → x8 → x20 → Play)
ZOOM	Zoom picture (+1 → +2 → +3 → OFF)	Zoom picture (+1 → +2 → +3 → OFF)
DISP	View on-screen playback information	View on-screen playback information
1-9, 0 (Keypad)	Enter digits for direct entry	Enter digits for direct entry
GOTO	Access direct entry screen	Access direct entry screen
SUBTITLE	Select subtitle language	

Table 5: DVD/VCD Remote Control Functions

Button	Function	
Name	DVD	VCD
ANGLE	Play alternate angles if DVD contains scenes shot simultaneously from different angles	

Controlling Playback

To access the on-screen controls, touch the bottom 1/3 of the screen while a DVD is playing. Touch the 1/2 button to view a second page of controls

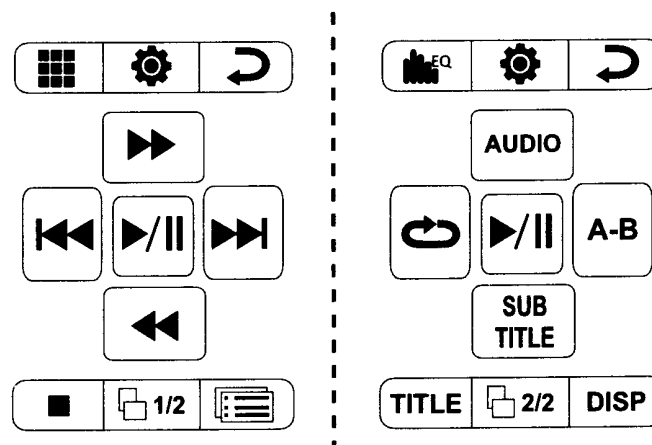

Stopping Playback

Touch the stop button (■) on the screen or press the ||►/BAND button (20) on the remote control to stop DVD play.

Pausing Playback

Touch the play/pause button (►) on the screen or press the ►/|| button on the remote control (18) to suspend or resume disc play.

Slow Motion Playback

Press the ◀◀ button (22) on the remote control or the ◀◀ button on the screen to play the current title in slow motion. Keep pressing and releasing the button to increase the rate from “x2” to “x4”, “x8”, and “x20”.

Press ►/|| (16) on the remote control or touch the on-screen play button (►) to resume normal play.

Fast Forward Playback

Press the ►► button (14) on the remote control or the ►► button on the screen to fast forward. Keep pressing and releasing the button to increase the rate from "x2" to "x4", "x8", and "x20".

Press ►/|| (18) on the remote control or touch the on-screen play button (►) to resume normal play.

Repeat Playback

Press the RPT button (7) on the remote control or the  button on screen to alter repeat mode according to the following:

- DVD: Repeat Chapter, Repeat Title, Repeat Off
- VCD (PBC Off): Repeat Single, Repeat Off

NOTE: For VCD play, the repeat function is not available if PBC is on.

Sectional Repeat Function (A-B)

Use the A-B function to define a specific area of a disc to repeat.

- Press the A-B button on screen to set the start point (A) of the repeated section.
- Press the A-B button again once you reach the desired end point (B) of the repeated section. The selected portion of the DVD will now repeat continuously.
- Press the A-B button again to cancel the A-B section setting and stop repeat play.

Accessing the DVD Menu

Press the MENU button (1) on the remote control to recall the main DVD menu. Use the directional (arrow) buttons on the remote control to select a title from the menu or touch the title on screen.

Press the TITLE button (2) on the remote control or on screen to select a different title for playback.

Press the ►/|| button (18) on the remote control or press the rotary encoder (1) to confirm your selection and begin playback. You can also select a title using the touch screen.

Moving Through Chapters

Press the ►►| button (19) on the remote control or the ►►| button on screen to advance to the next chapter on the DVD.

Press the |◀ button (17) on the remote control or the |◀ button on screen to move to the previous chapter.

Goto Search (Remote Control Required)

During DVD or VCD playback, perform the following steps to use the GOTO feature to access a specific location on a disc:

1. Press the **GOTO** button (21) on remote control to access the "Search" screen.
2. Press the ▶▶ or ◀◀ buttons (14, 22) on the remote control to select a category (highlighted in yellow).
 - For DVD mode, you can choose Time or Title/Chapter search.

Search	
Title	20
Chapter	5
Time	00 : 00 : 00

DVD Search

Title – Go to specific title

Chapter – Go to specific chapter

Time – Go to specific time in current title

- For VCD mode, press the **GOTO** button to choose between Time search.

Search	
Time	00 : 00 : 00

VCD Track Search


Time – Go to specific time in the current track

3. Enter a time into the field using the numeric keypad (29) on the remote control.
4. Press the ▶/|| button (18) on the remote control to go to the specified location on the disc.
5. Press the **GOTO** button again to exit.

Direct Chapter / Track Selection


Remote Control Direct Entry

During DVD, VCD and CD playback, you can use the numeric keypad on the remote control (29) to access a track directly.

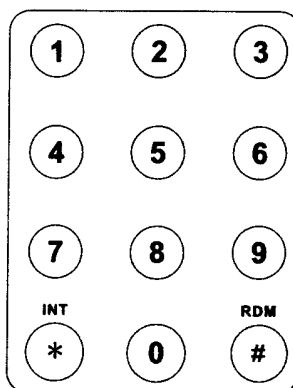

Touch Screen Direct Entry

To select a chapter/track directly, touch the  button on screen control to display the direct entry menu.

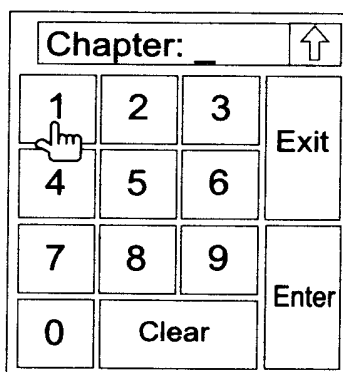

Enter the desired chapter/track using the on-screen number pad. Press the **Enter** button to tune to the selected station. To exit the screen without changing the station, touch **Exit**. To clear your entry and start over, touch **Clear**.

Viewing an Alternate Picture Angle (DVD Only)

Some DVDs contain scenes that have been shot simultaneously from different angles. For discs recorded with multiple angles, press the **ANGLE** button (13) on the remote control to toggle available angles of the on-screen image.

Zooming

Press the **ZOOM** button (23) on the remote control to enlarge and pan through the video image using the following options: "Q1", "Q2", "Q3" and "OFF".

Multi-Language Discs (DVD Only)

Changing Audio Language

If you are watching a disc recorded in multiple languages, press the **AUDIO** button (5) on the remote control to choose a language.

Changing Subtitle Language

If you are watching a disc recorded in multiple languages with subtitles, press the **SUBTITLE** button (9) on the remote control to choose the language in which you would like the subtitles to appear.

NOTE: During VCD playback, press the AUDIO button (5) on the remote control to choose between Left Channel, Right Channel, and Stereo.

PBC - Play Back Control (VCD Only)

For VCDs with play back functionality, play back control (PBC) provides additional controls for VCD playback.

Press the **MENU** button (1) on the remote control to toggle the PBC function "On"/"Off". Once PBC is on, playback starts from track one of the play list.

NOTE: When PBC is activated, fast forward, slow playback, and previous/next track are available. Repeat and direct track selection are not available.

When PBC is activated, selecting random, scan, or search playback automatically deactivates PBC.

Playback Information

During DVD and VCD playback, press the **DISP** button (10) on the remote control to display playback information on the screen, including the media playing and current playback time.

DVD Playback Information

- DVD Video – Format of current disc.
- Time 00:01:30/00:36:10 – Indicates the playback time of the current track.
- Title 5/08 – Indicates the fifth of 8 titles on the DVD is currently playing.

- Chapter 2/16 – Indicates that the second of 16 titles on the DVD is currently playing.

VCD Playback Information

- VCD2.0 – Format of current disc.
- Time 00:01:30/00:36:10 – Indicates the playback time of the current track.
- PBC On/Off – Indicates whether Play Back Control is On or Off.

General Disc Information

Table 6: Disc Properties





Symbol	12cm Disc Properties	Max Play Time
 	Single side single layer (DVD-5) Single side double layer (DVD-9) Double side single layer (DVD-10) Double side double layer (DVD-18)	(MPEG 2 Method) 133 minutes 242 minutes 266 minutes 484 minutes
	Single side single layer (VCD)	(MPEG 1 Method) 74 minutes
	Single side single layer	74 minutes

Table 7: Disc Symbols



 
 

Symbol	Meaning
	Number of voice languages recorded. The number inside the icon indicates the number languages on the disc (maximum of 8).
	Number of subtitle languages available on the disc (maximum of 32).
	Number of angles provided (maximum of 9).
	Aspect ratios available. "LB" stands for Letter Box and "PS" stands for Pan/Scan. In the example on the left, the 16:9 video can be converted to Letter Box video.

Table 7: Disc Symbols

Symbol	Meaning
	<p>Indicates the region code where the disc can be played.</p> <ul style="list-style-type: none"> • Region 1: USA, Canada, East Pacific Ocean Islands • Region 2: Japan, Western Europe, Northern Europe, Egypt, South Africa, Middle East • Region 3: Taiwan, Hong Kong, South Korea, Thailand, Indonesia, South-East Asia • Region 4: Australia, New Zealand, Middle and South America, South Pacific Ocean Islands/Oceania • Region 5: Russia, Mongolia, India, Middle Asia, Eastern Europe, North Korea, North Africa, North-West Asia • Region 6: Mainland China • ALL: All regions

DVD/CD AUDIO OPERATION

Instructions for TFT control and Insert/Eject are the same for DVD and CD operation. Please see the DVD/Disc Video Operation section for information about these topics.

The VM9314 will play music or other audio files from the following disc media:

- CD-DA
- CD-R/RW
- DVD
- DVD+R/RW
- DVD-R/RW


NOTE: CD-R and CD-RW will not play unless the recording session is finalized.

Accessing DISC Mode

To access the DISC screen, press the **SRC** button (2) on the front panel or touch the top left corner of the screen to access the Source Menu, and then touch the “DISC” icon. When the screen is closed, press the **SRC** button (8) on the remote control until the “DISC” is displayed on the LCD.

On-Screen Controls and Indicators

The on-screen indicators and touch key areas for CD/DVD audio playback are outlined below:

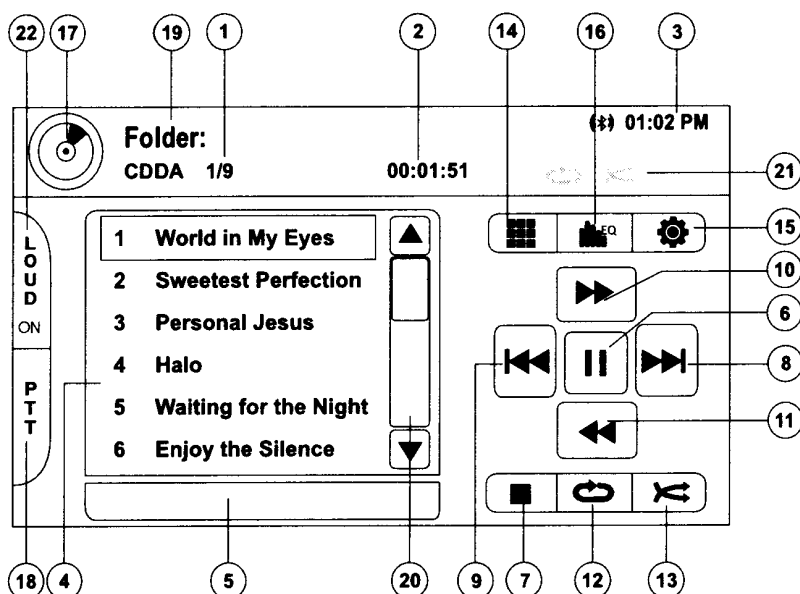









1. Current track and total number of tracks on disc

2. Elapsed playing time
3. Current time
4. Track titles
5. Disc title
6. ►/||: Play/pause
7. ■: Stop disc playback. Press ►/|| to resume normal playback.
8. |◀◀: Previous track
9. ▶▶: Next track
10. ◀◀: Fast reverse x2, x4, x8, x20. Press ►/|| to resume normal playback.
11. ▶▶: Fast forward x2, x4, x8, x20. Press ►/|| to resume normal playback.
12. ↺: Repeat
CDDA: (x1) Repeat Single, (x2) Repeat Folder, (x3) Repeat Off
DVD: (x1) Repeat Chapter, (x2) Repeat Title, (x3) Repeat Off
CD-R/RW: (x1) Repeat Single, (x2) Repeat Off
DVD-R/RW: (x1) Repeat Single, (x2) Repeat Off
13. ✂: Activate/deactivate Random mode
14. ■■: Access the direct entry screen
15. ⚙: View the SETUP menu
16. Touch for quick access to Equalizer level settings
17. (a) Current source
(b) Touch to view the SOURCE MENU and select a new source
18. PTT: Activate the Push To Talk voice recognition feature. See "iPod Voice Control" on page 19.
19. Folder name
20. Touch the arrows and scroll bar to navigate the list
21. Repeat and Random playback indicators
22. LOUD: Turn loudness features ON/OFF

Remote Control Functions

Table 8: CD/DVD Audio Remote Control Functions


	Eject disc
 BAND	Select AM/FM band
	Previous track
	Next track
	Fast reverse x2, x4, x8, x20
	Fast forward x2, x4, x8, x20
	Play/pause
	Stop playback
1-9, 0	Direct entry
EQ	Access equalizer menu
GOTO	Access direct entry keypad
PTT	Push to talk
RPT	CDDA: (x1) Repeat Single, (x2) Repeat Folder, (x3) Repeat Off DVD: (x1) Repeat Chapter, (x2) Repeat Title, (x3) Repeat Off CD-R/RW: (x1) Repeat Single, (x2) Repeat Off DVD-R/RW: (x1) Repeat Single, (x2) Repeat Off
#/RDM	Turn random (shuffle) mode on/off

Track Scan Select (CD-DA discs only)

During disc play, press the **INT** button (34) on the remote control to play the first 10 seconds of each track. When a desired track is reached, press the **INT** button again to cancel the function and play the selected track.

Direct Track Entry

To select a track directly, touch the  button on screen control to display the direct entry menu.

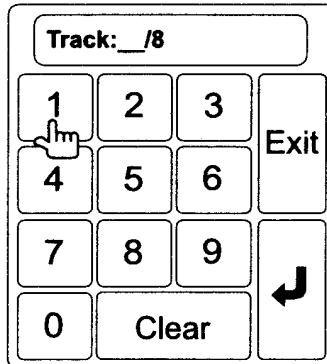

The interface shows a track selection menu. At the top is a label 'Track: __/8'. Below it is a grid of buttons. The first three rows have three buttons each, labeled 1 through 9. The bottom row has two buttons labeled '0' and 'Clear'. To the right of the 1-9 grid is a vertical column of three buttons: 'Exit' at the top, an empty space in the middle, and an enter button (represented by a downward arrow) at the bottom. A hand icon is shown touching the button labeled '1'.

Track: __/8			
1	2	3	Exit
4	5	6	
7	8	9	
0	Clear		↵

Enter the desired track using the on-screen number pad. Press the enter button (arrow) to play the selected track. To exit the screen without selecting a track, touch **Exit**. To clear your entry and start over, touch **Clear**.

MP3 OPERATION

Instructions for TFT control and Insert/Eject are the same for DVD and MP3 operation. Please see the DVD/Disc Video Operation section for information about these topics.

Media and File Requirements

This player allows you to play back MP3 and WMA files recorded onto CD-R/RWs, DVD+R/RWs, and DVD-R/RWs. For CD-RW discs, please make sure it is formatted using the full method and not the quick method to prevent illegal disc operation.

NOTE: CD-R and CD-RW will not play unless the recording session is finalized.

Up to 1500 songs/files can be burned onto a disc for a DVD music mix. Do not exceed this number of songs/files or disc readability problems may occur.

MP3 Format Compatibility

The file naming formats listed below are compatible with this unit:

- ISO 9660 – file name: 12 characters, file extension: 3 characters
- ISO 9660 – file name: 31 characters, file extension: 3 characters
- Joliet – 64 characters

If the file or folder name does not conform to ISO 9660 file system standards, it may not be displayed or played back correctly. Use the following settings when compressing audio data for your MP3 disc:


- Transfer Bit Rate: 128kbps
- Sampling Frequency: 48kHz

When recording MP3 up to the maximum disc capacity, disable additional writing. For recording on an empty disc up to maximum disc capacity, use the "Disc at once" setting.

MP3 Playing Order

When selected for play, files and folders (Folder Search, File Search or Folder Select) are accessed in the order they were written by the CD writer. As a result, the order in which they are expected to be played may not match the order in which they are actually played. You may be able to set the order in which MP3/WMA files are to be played by writing them onto a medium such as a CD-R with their file names beginning with play sequence numbers such as "01" to "99".

For example, a medium with the following folder/file hierarchy is subject to Folder Search, File Search or Folder Select, as shown below.

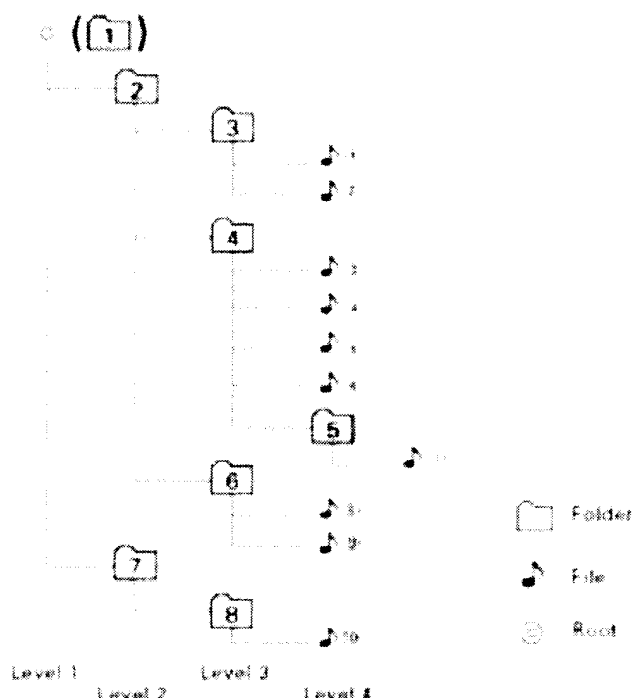


The VM9314 player will only recognize three folder levels and does not display folders containing only other folders. In the example above, the unit will display folders 3, 4, 6, and 8, but not 2 and 7 since they do not contain any tracks directly. Folder 5 is not recognized at all since it is at the fourth level.

Inserting a USB Device

NOTE: The USB port will recognize most USB flash memory devices and portable hard drives (hard drives must be formatted to FAT32, NTFS is not supported).

1. Locate the USB connector (4) on the front of the radio.

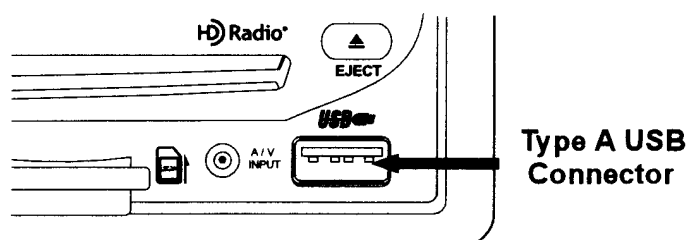


2. Insert the USB device into the USB connector. The unit will read the audio/video files on the USB device automatically.

To remove the USB device, press the **SRC** button (2) to switch to another mode and then remove the USB device from the USB connector.

Accessing an SD Card

1. Locate the SD connector (9) on the front of the radio.
2. Insert the SD card into the SD connector.
3. Press the **SRC** button (2) on the front panel or remote control (8) or touch the top left corner of the screen to access the Source menu, and then touch the "SD" icon.

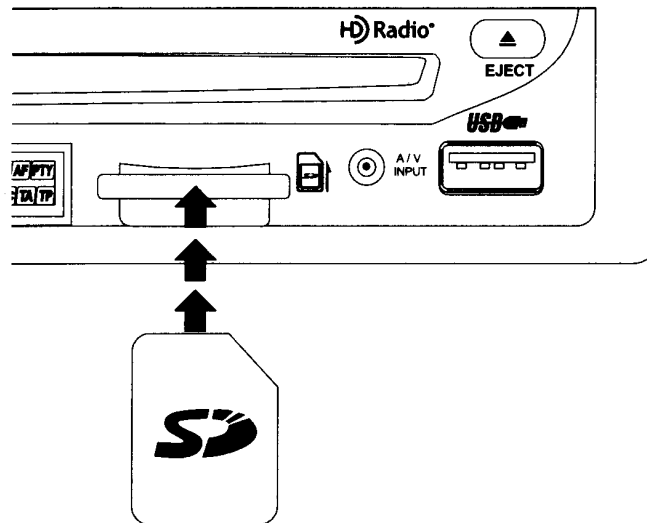

Before removing the SD card, change the radio to another source. To remove, pull straight out.

NOTE: Maximum SD card size supported by this unit is 16GB.


Accessing MP3 Mode

To access the MP3 interface screen, press the **SRC** button (2) on the front panel or touch the top left corner of the screen to access the Source Menu, and then touch the source containing MP3 files. When the screen is closed, press the **SRC** button (8) on the remote control until the appropriate source name is displayed on the LCD. MP3/WMA files will play in the sequence of the 'Root' directory.





NOTE: When burning MP3 / WMA files onto a DVD disc, use the 2X or 4X burning option, if available. This slower burning speed will help eliminate buffer errors and increase disc reading reliability. Also, use folders when burning large numbers of songs / files to a disc for easy music navigation. Select the "Disc at Once" option and close your disc.

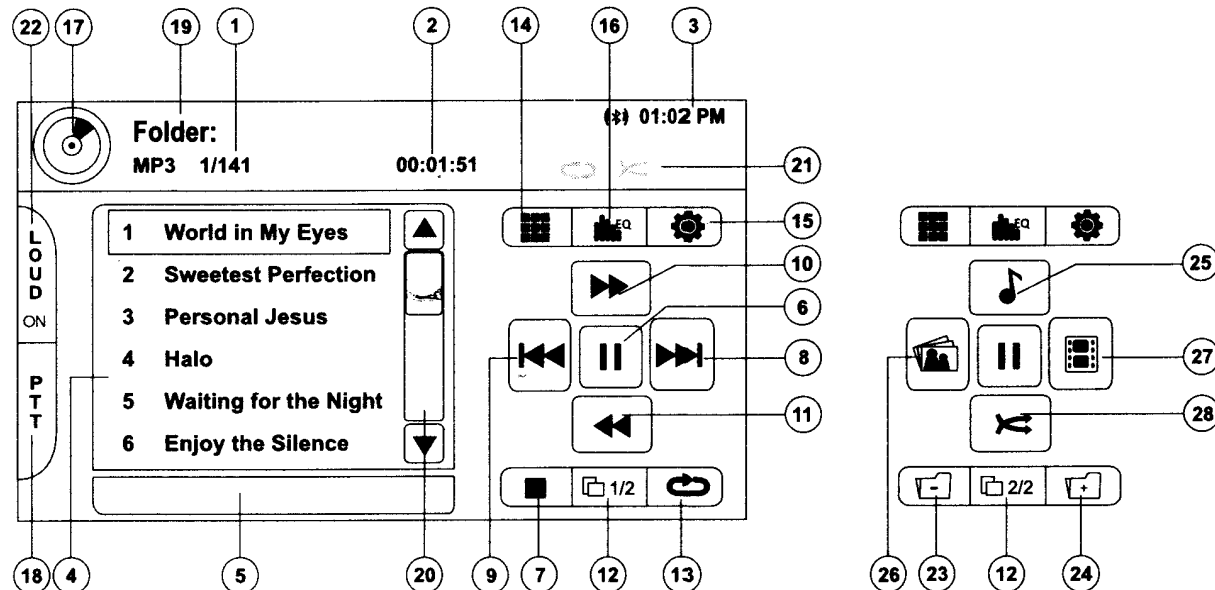On-Screen Controls and Indicators

The on-screen indicators and touch key areas for MP3 playback are outlined below.










1. Current track and total number of tracks on disc
2. Elapsed playing time
3. Current time
4. Track titles
5. ID3 information
6. ►||: Play/pause
7. ■: Stop disc playback. Press ►|| to resume normal playback.
8. |◀◀: Previous track
9. ▶▶: Next track
10. ◀◀: Fast reverse x2, x4, x8, x20. Press ►|| to resume normal playback.
11. ▶▶: Fast forward x2, x4, x8, x20. Press ►|| to resume normal playback.
12. 1/2, 2/2: Touch to move between page 1 and 2 of the on-screen controls
13. ↺: (x1) Repeat Single, (x2) Repeat Folder, (x3) Repeat Off
14. ■■: Access the direct entry screen.
15. ⚙: View the SETUP menu.
16. Touch for quick access to Equalizer level settings.
17. (a) Current source
(b) Touch to view the SOURCE MENU and select a new source
18. PTT: Activate the Push To Talk voice recognition feature. See "iPod Voice Control" on page 19.
19. Folder name
20. Touch the arrows and scroll bar to navigate the list.

21. Repeat and Random playback indicators
22. **LOUD**: Turn loudness features ON/OFF
23. **DIR -**: View the previous folder
24. **DIR +**: View the next folder
25.  : List audio files
26.  : List photo files (see "Viewing JPEG Photos" on page 50)
27.  : List video files (see
28.  : Activate/deactivate Random mode

Remote Control Functions



Table 9: MP3 Remote Control Functions

	Eject disc
	Previous track
	Next track
	Fast reverse x2, x4, x8, x20
	Fast forward x2, x4, x8, x20
	Play/pause
	Stop playback
1-9, 0	Direct entry
EQ	Access equalizer menu
GOTO	Access direct entry keypad
PTT	Push to talk
RPT	(x1) Repeat Single, (x2) Repeat Folder, (x3) Repeat Off
#RDM	Turn random (shuffle) mode on/off

Direct Track Entry

 Use the numeric keypad (29) on the remote control to access files directly or press the  button (see "Direct Track Entry" on page 44).











VIEWING JPEG PHOTOS


JPEG images stored as individual images or stored in folders can be accessed using the DISC/SD/USB interface. When a disc/card is loaded and read by the unit, the root menu will display the music contents of the disc when music files are present. To view photos, press the  button to view a second page of controls and then press the  button.

Controlling Playback


 
Touch the arrows and scroll bar to the right of the image names to navigate the list. Touch the image name to display the selected image. The unit will display the selected image and then automatically play a slide show of all images.

While viewing photos, touch the bottom half of the screen to access the following on-screen controls:

 

1. : Access the direct entry screen
2. : View the SETUP menu
3. : Close on-screen menu
4. : Rotate clockwise in 90 degree increments
5. : Previous photo
6. : Play/pause
7. : Next photo
8. : Zoom Q1, Q2, Q3, QOff
9. : Stop photo slide show and return to the USB menu
10. : (x1) Repeat Single, (x2) Repeat Folder, (x3) Repeat Off
11. **DISP**: Display file information (file name and track number)

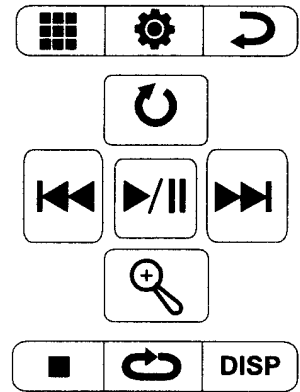

Returning to the Music Interface

To return to the music interface, touch the  icon to list audio files. Touch to select an audio file and begin playback. Touch the  button to view MP3 playback controls.


MPEG MOVIE PLAYBACK









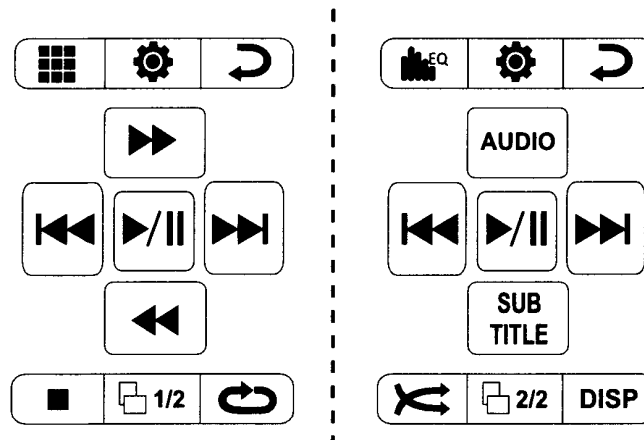



Version 1 and 2 MPEG movies can be accessed using the DISC/SD/USB interface. When a disc/card is loaded and read by the unit, the root menu will display the music contents of the disc when music files are present. To view MPEG movies, press the  1/2 button to view a second page of controls and then press the  button.

Controlling Playback

Touch the arrows and scroll bar to the right of the movie names to navigate the list. Touch the movie name to play that movie.



While viewing an MPEG movie, touch the bottom half of the screen to access the following on-screen controls:



1. : Access the direct entry screen
2. : View the SETUP menu
3. : Close on-screen menu
4. : Fast forward x2, x4, x8, x20
5. : Previous photo
6. : Play/pause
7. : Next photo
8. : Fast reverse x2, x4, x8, x20
9. : Stop playback and return to the USB menu
10. 1/2 and 2/2: View a second screen of menu choices
11. : (x1) Repeat Single, (x2) Repeat Folder, (x3) Repeat Off
12. : Quick access to Equalizer level settings
13. **AUDIO**: Send audio to Left or Right speakers or listen in Stereo
14. **SUBTITLE**: Choose from available subtitle languages
15. : Activate/deactivate Random mode
16. 2/2: View the first screen of menu choices

17. **DISP:** Display file information (file name and track number)

Returning to the Music Interface


To return to the music interface, touch the  icon to list audio files. Touch to select an audio file and begin playback. Touch the  button to view MP3 playback controls.

XM® RADIO OPERATION

Listeners can subscribe to XM® Radio on the Web by visiting www.xmradio.com, or by calling (800) 967-2346. Customers should have their Radio ID ready (see “Displaying the Identification (ID) Code”). Customers can receive a limited number of free-to-air channels without activation.

Accessing XM® Radio Mode

Press the **SRC** button (2) on the front panel or remote control (8) to switch to the XM source.

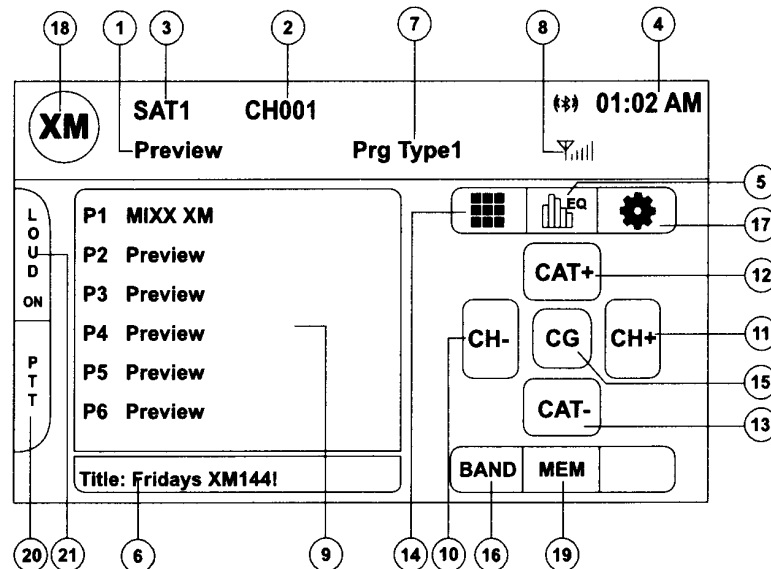

1. XM channel name
2. XM channel number
3. XM band
4. Time
5. **EQ**: Adjust preset equalizer settings
6. Song title, artist name
7. Category
8. Signal strength indicator
9. Current preset channels/on-screen preset buttons
10. **CH-**: Select the previous channel
11. **CH+**: Select the next channel
12. **CAT+**: Select next channel in current category only
13. **CAT-**: Select previous channel in current category only
14. Touch to enter channel directly using the on-screen keypad
15. **CG**: Access Channel/Category Guide mode
16. **BAND**
17. **MEM**
18. **XM** logo
19. **Prg Type1**
20. **L O U D**
21. **P T T**


16. **BAND**: Change between XM1, XM2 and XM3 bands
17.  : View the SETUP menu
18. Touch this area to view the SOURCE MENU and select a new playback source
19. **MEM**: View screen used to enter current channel into preset memory
20. **PTT**: Activate the Push To Talk voice recognition feature. See “iPod Voice Control” on page 19.
21. **LOUD**: Turn the loudness feature on/off

Table 10: XM Radio Remote Control Functions

 ▶ / BAND	Select SAT1, SAT2, SAT3 band
◀◀	Previous channel
▶▶	Next channel
 ◀◀	Browse category
▶▶ 	Browse category
1-9, 0	Direct entry
EQ	Access equalizer menu
GOTO	Access direct entry keypad
PTT	Push to talk

Displaying the Identification (ID) Code

Before you listen to satellite radio, you must subscribe to the service using your radio’s identification number. To display the radio ID, touch the **CH-** or **CH+** buttons on the screen repeatedly to tune to channel “000”. The screen displays the radio ID where the channel name is usually displayed.

Selecting a Station

Touch the **CH-** or **CH+** buttons on the screen to select a different station.


Preset Mode

To enter preset mode, touch the **BAND** button on the screen, or press the **BAND** button on the unit (14) or remote control (20) to change between the following bands: SAT1, SAT2, or SAT3 (indicated in the top left corner of the TFT screen).

Six numbered preset buttons store and recall stations for each band. All six stored stations (P1-P6) for the current band appear on the TFT screen.

Storing a Station

1. Select a band (if needed), then select a station.
2. Touch the on-screen **MEM** button to open the preset screen.

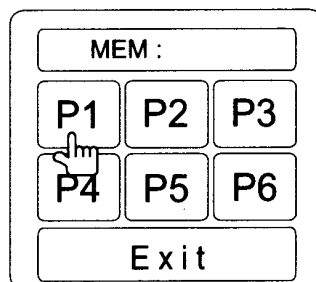



3. Touch the preset number in which you would like to store the current station (or press **Exit** to cancel and close the menu). The preset number and station appears highlighted.

Recalling a Station

1. Select a band (if needed).
2. Touch an on-screen preset button to select the corresponding stored station.

 Direct Tuning

To enter a radio station directly, touch the  button or press the **GOTO** button (21) on the remote control to display the direct entry menu.

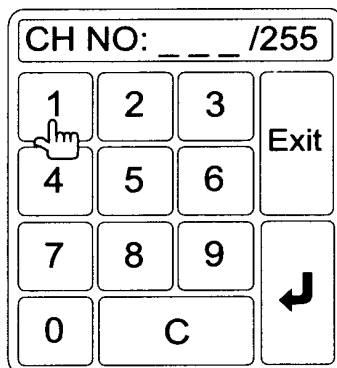


Enter the desired radio station using the on-screen number pad. Touch the arrow (enter) button to tune to the selected station. To exit the screen without changing the station, touch **Exit**. To clear your entry and start over, touch **C**.

Channel/Category Guide Mode

There are two search modes to help navigate through channels and or categories. To access the Channel/Category Guide mode, touch the **CG** button.

Channel Guide is the default search mode. To access Category Guide, press the **SUBTITLE** button (9) on the remote control or touch **CAT** on the touch screen. To return to Channel Guide, touch **CH** on the screen or press the **TITLE** button (2) on the remote control.

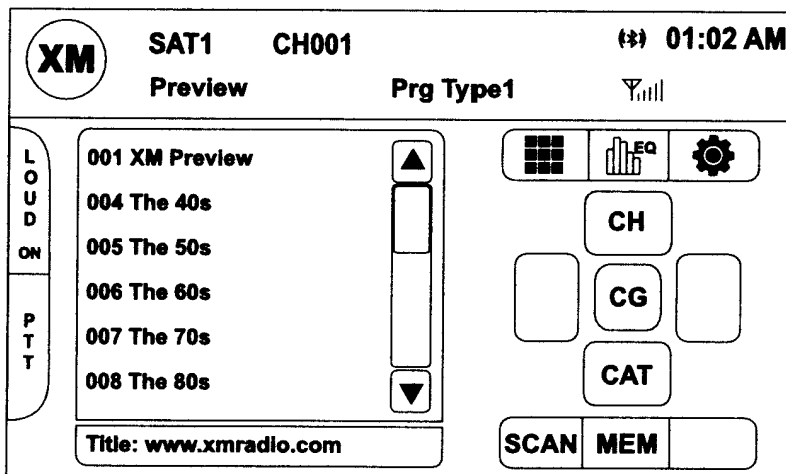

Channel Guide Mode

When Channel Guide mode is selected, the first six satellite channels are displayed in the boxes in the bottom left of the TFT screen and the on-screen menu changes to facilitate search mode.

- While in Search Mode, to switch between Channel and Category search modes, touch the **CH** or **CAT** buttons on the screen.
- Use the scroll bar and arrows on the touch screen to view the next/previous page of stations. Each page contains six channels to select from.
- Touch the on-screen **SCAN** button to preview each of the 6 channels displayed for 10 seconds.
- Touch the **CG** button to return to the Preset Mode screen.
- To select a channel while in Channel Guide mode, touch the channel name on the screen. The channel will begin playing and the unit will return to the Preset Mode.

Category Guide Mode

When Category Mode is selected, folder icons appear on the screen next to category choices.

- While in Search Mode, to switch between Channel and Category search modes, touch the **CH** or **CAT** buttons on the screen.
- Use the scroll bar and arrows on the touch screen to view the next/previous page of categories. Each page contains six categories to select from.
- To select a category, touch the corresponding category name or folder icon. The channels in that category will be displayed on the screen.
- Use the scroll bar and arrows on the touch screen to view the next/previous six stations in the selected category.
- Touch the on-screen **SCAN** button to preview each channel in the selected category for 10 seconds.
- Touch the channel name to play that channel.
- Touch the on-screen **CG** button to return to the Preset Mode screen.

iPod OPERATION

NOTE: Be sure your iPod has the latest Apple firmware installed to avoid connectivity issues.

Accessing iPod Mode


This unit is Made for iPod and works with iPhone. You can control your iPod via touch screen to access Playlist, Artist, Album, Songs, etc. Supported models include, but are not limited to, the following:

- iPod Classic
- iPod Touch 2G / 3G
- iPod Nano 3G / 4G / 5G
- iPhone 3G / 3GS

The unit will automatically switch to iPod mode when an iPod or iPhone is plugged into the front USB connector.

NOTE: For basic iPod connectivity, you can use the white 30-pin to USB iPod cable that came with your Apple device. For iPod video or photo playback, you must purchase the jLink-USB cable.

To return to the iPod menu from any other source menu, press the **SRC** button (2) on the front panel or remote control (8) until the iPod menu appears on the screen. The on-screen indicators and touch key areas for iPod playback are outlined below.

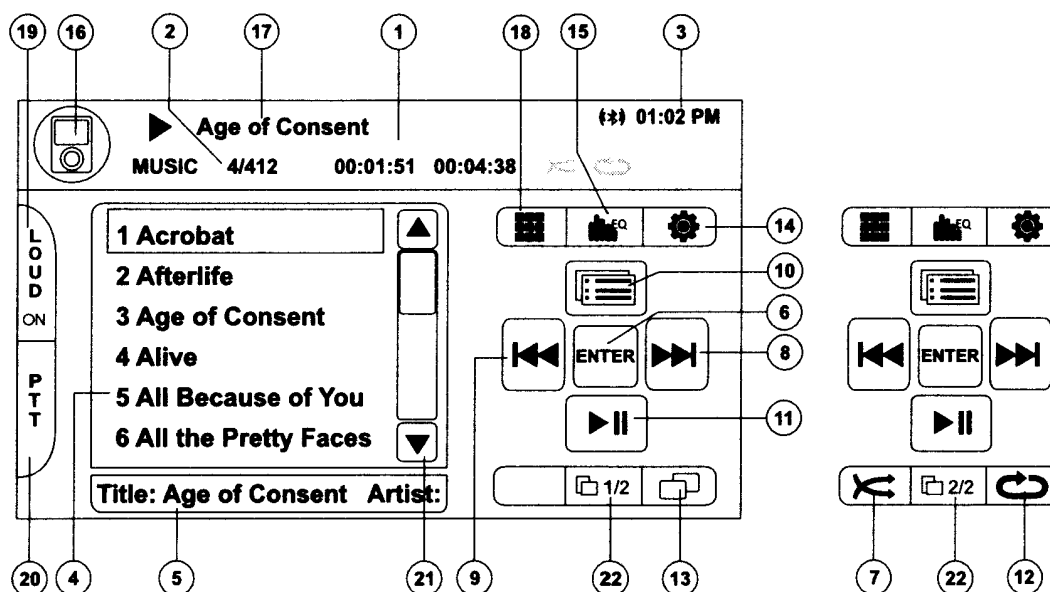

1. Elapsed playing time/total playback time




 
 

 

 








2. File number and total number of files on the iPod
3. Current time
4. File titles
5. ID3 information (Artist/Album)
6. **ENTER**: Touch to "Enter"
7. : Activate/deactivate Random mode
8. : Next track
9. : Previous track
10. : iPod Menu
11. : Play/pause
12. : (x1) Repeat Single, (x2) Repeat All
13. : View the song title screen
14. : View the SETUP menu.
15. : Quick access to Equalizer level settings.
16. (a) Current source
(b) Touch to view the SOURCE MENU and select a new source
17. Current file title
18. : Access the direct entry screen.
19. **LOUD**: Turn loudness features ON/OFF
20. **PTT**: Activate the Push To Talk voice recognition feature. See "iPod Voice Control" on page 19.
21. Touch the arrows and scroll bar to navigate the list.
22. **1/2, 2/2**: Touch to move between page 1 and 2 of the on-screen controls

Table 11: iPod Remote Control Functions

RPT	Press once to repeat song, twice to repeat album
SUBTITLE	Select photo menu
ANGLE	Select video menu
AUDIO	Select music menu
	Previous file
	Next file
	Play/Pause
	Menu up
	Menu select (enter) or play/pause
	Stop (press  to resume playback)
1-9, 0 (Keypad)	Direct enter file number for playback

 
Controlling your iPod








Touch the  button or press the following remote control buttons to access the main iPod menu.

Menu	Remote Control
Music	AUDIO
Photos	SUBTITLE
Videos	ANGLE

 
Use the touchscreen or the directional keys on the remote control to navigate the iPod menus.

File Playback

To access files, touch the  button on screen until you return to the main iPod menu and then select "MUSIC," "VIDEO" or "PHOTO" or press the remote control button indicated in the table above.

- Use the touch screen to navigate the iPod menu and select a file for playback.
- Touch the  button to return to the previous screen.
- Touch the  button on screen or the  button (18) on the remote control to play/pause.
- Touch  on screen or press the  button (19) on the remote control to move to the next item on the menu.
- Touch  on screen or press the  button (17) on the remote control to move to the previous item on the menu.

During music playback, the following screen is displayed:

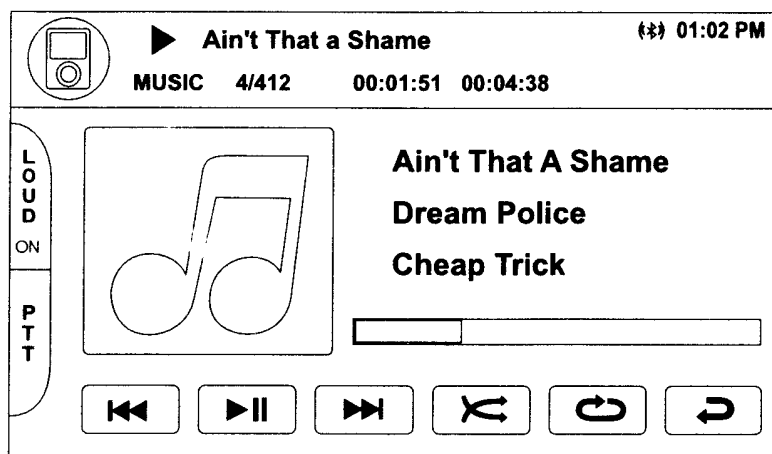

- To return to the iPod music menu from the song title screen, press .

- To return to the Video or Photo menu while viewing video or photo, touch the center of the screen.

NOTE: The jLink USB cable must be used for video playback.

NOTE: Only the iPod Touch (1, 2, 3 Gen) and iPhones allow photo viewing through the VM9314.


Fast Forward/Fast Reverse

Press and hold the |◀◀ or ▶▶| buttons on screen or on the remote control (17, 19) for 1 second and continue to hold for fast forward or fast reverse. Release to resume normal play.

Direct Track Entry

To select a track directly, touch the  button on screen control to display the direct entry menu.

Enter the desired track using the on-screen number pad. Press the arrow (enter) key to tune to the selected station. To exit the screen without changing the station, touch Exit. To clear your entry and start over, touch Clear.

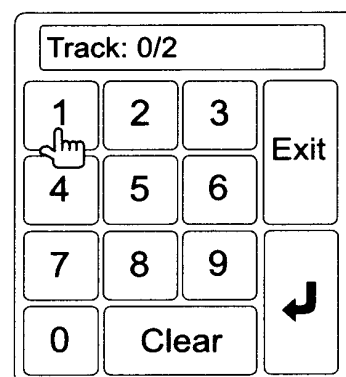

The interface shows a 'Track: 0/2' header at the top. Below it is a numeric keypad with buttons for digits 1 through 9, 0, and a 'Clear' button. To the right of the keypad is an 'Exit' button and a button with a left-pointing arrow. A hand icon is shown touching the number '1' button.

NOTE: To transmit the video from your iPod to the VM9314 screen, you must set the following options through the iPod video settings menu: TV Out = On, TV Signal = NTSC, and Widescreen = On.

NOTE: After disconnecting your iPod, the VM9314 will always return to the last mode accessed when the iPod is plugged back into the unit.

BLUETOOTH OPERATION

NOTE: Bluetooth operation requires an optional BTM15 accessory.

The BTM15 module has a secondary microphone for voice recognition. When installing the BTM15, the original single microphone that came with the VM9314 can be disconnected and the BTM15 secondary microphone can be used.

This connectivity eliminates the original microphone and allows the BTM15 to perform voice recognition and Bluetooth functions for a cleaner looking installation.

About Bluetooth


Bluetooth is a short-range wireless radio connectivity technology that is developed as a cable replacement for mobile phones, handheld PCs and other devices. Bluetooth operates in 2.4 GHz frequency range and transmits voice and data at speeds up to 1 megabit per second. Bluetooth was launched by a special interest group (SIG) comprised of Ericsson Inc., Intel Corp., Nokia Corp., Toshiba and IBM in 1998, and it is currently developed by nearly 2,000 companies worldwide. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Audiovox Corporation is under license. Other trademarks and trade names are those of their respective owners.

NOTE: The line-of-sight distance between this unit and your cellular phone must be 8 meters or less for sending and receiving voice and data via Bluetooth wireless technology. However, the transmission distance may become shorter than the estimated distance, depending on the environment in use.

Before attempting to use the Bluetooth functions on the VM9314, you must purchase and install the BTM15. When connected properly, the blue light appears illuminated. Bluetooth features are only available when the BTM15 is installed.

Please make sure your mobile phone supports Bluetooth functions (Headset or Handsfree profiles or both). Adhere to the following guidelines for successful operation.


- Before using Bluetooth functions, you must pair your mobile phone to the VM9314 head unit (see "Pairing the Bluetooth System with Your Mobile Phone and Head Unit"). To ensure the best reception for pairing and re-connection, please make sure the phone battery is fully charged before you begin.

- Try to perform pairing within a few minutes of the phone being turned on.
- Once the unit has been paired with the phone, the unit's model number, "VM9314", will be displayed on the mobile phone.
- To achieve the best performance, always keep the mobile phone within 3 meters of the head unit.
- Always keep a clear path between the mobile phone and the head unit. Never place a metal object or any other obstacle between the mobile phone and the head unit.
- Some mobile phones (like Sony Ericsson) may have a "Power Saving Mode" option. PLEASE DO NOT use the power saving mode with the VM9314.
- Before accepting or making a call, make sure your mobile phone's "Bluetooth function" is turned on.
- To ensure the best conversation quality/performance, stay within one meter of the BTM15 when talking.
- To "disconnect" the mobile phone from the head unit, turn the Bluetooth connectivity off on the mobile phone or touch the  button.
- Phone Book direct searching through the head unit is only available if the mobile phone supports Phone Book Download. If the feature is not supported, the head unit will display "Unavailable" when an attempt is made to download a phone book.

NOTE: Initial phone book indexing may take a few minutes and the data downloads to the phone.

Bluetooth User Interface

The on-screen indicators and touch key areas for Bluetooth operation are outlined below.

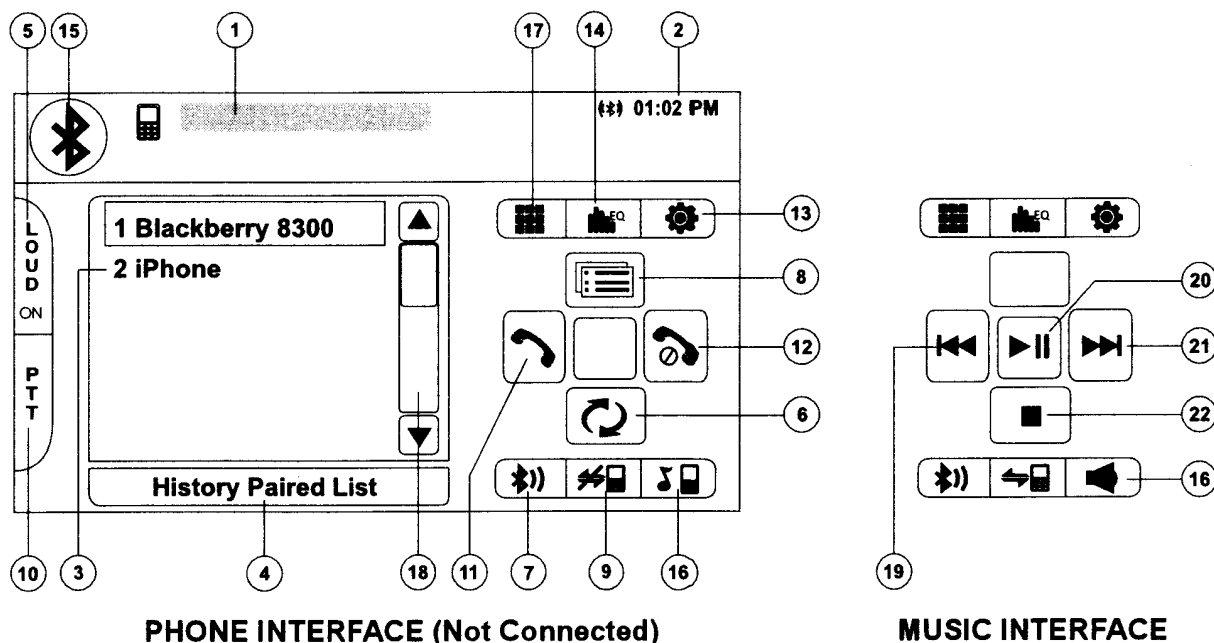

1. Name of connected device
2. Current time
3. List of previously paired devices
4. Current operation status
5. **LOUD**: Turn loudness features ON/OFF
6. : Transfer active call back to handset
7. : Pair your Bluetooth phone (first time use)
8. : Call list menu
9. : Connect/disconnect Bluetooth device (phone, PDA, personal music player, etc.) with hand-free function
10. **PTT**: Activate the Push To Talk voice recognition feature. See "iPod Voice Control" on page 19.
11. : Answer incoming call/make call
12. : Reject incoming call/end call/quit pairing process/quit reading phone book or call listing
13. : View the SETUP menu.
14. : Quick access to Equalizer level settings.
15. (a) Current source
(b) Touch to view the SOURCE MENU and select a new source
16. : Toggle Phone/Music interface












17. : Access the direct entry screen
18. Touch the scroll bar and arrows to view the previous/ next page of choices (only visible when needed)
19. : Previous file
20. : Play/pause
21. : Next file
22. : Stop A2DP playback

Table 12: Bluetooth Remote Control Functions

	Play/pause music playback (not compatible with all phones)
 / 	Stop music playback/hang up or ignore call
	Previous file during music playback (not compatible with all phones)
	Next file during music playback (not compatible with all phones)
1-9, 0	Direct phone number entry
GOTO / 	Access direct entry keypad/answer or dial selected number
PTT	Push to talk



Hands Free Profile (HFP)

To use a phone wirelessly with this unit, it is necessary to first establish a connection using Bluetooth wireless technology. Connection is normally established using HFP (Hands Free Profile), which gives you full control of functions available on the telephone source. However, depending on your phone, the connection may be made using HSP (Head Set Profile), making some functions unavailable. This is a limitation of your phone, not the VM9314.

Since there are a number of Bluetooth mobile phone implementations available on the market, operations with your Bluetooth mobile phone using this unit vary greatly.

Please refer to the instruction manual that came with your Bluetooth mobile phone along with this manual while operating your phone with this unit.

Pairing the Bluetooth System with Your Mobile Phone and Head Unit

1. Press the  button (7) to initiate the pairing process. Keep the mobile phone within 2 meters of the head unit when pairing. (To terminate the pairing process, press the  button again.)
2. Select the Bluetooth setup option on the mobile phone to be paired (please refer to the phone's instruction manual to learn how to enter Bluetooth setup, turn Bluetooth on/off, and perform pairing).


NOTE: Some phones require a "pass key" or pairing code to connect. If your phone requires a pass key or pairing code, you will need to enter this number in the Pairing Code field under the Bluetooth SETUP menu. The default pairing code for many phones is "0000". The default code for the VM9314 is "1234". See "BT (Bluetooth) Sub-menu Features" on page 26 for instructions on entering the pairing code.

3. Select "VM9314" from the pairing list on the mobile phone.
 - If pairing is successful, the TFT will display the paired mobile phone model number or name (as specified in your phone's Bluetooth Setup menu).
 - If pairing fails, "Phone Pairing Fail" is displayed at the bottom of the screen.

Reconnecting

Once the Bluetooth device has been paired, you can touch the connect  button (9) to reconnect.

NOTE: *You can only connect to a phone using the buttons on the on-screen Phone interface.*

Each time the  button is pressed, the head unit will automatically reconnect with the mobile phone once (only if the mobile phone was previously paired with the head unit).

Managing Incoming Calls

When connected to a Bluetooth phone, the unit will mute audio output, pause CD play, and change to the Bluetooth screen when a call is received. An incoming phone number will appear at the top of the screen.

Answering an Incoming Call


To answer the call, touch the  button (11).

NOTE: *The TALK button on the BTM15 can be used to answer calls or hang up.*

For best reception, speak loudly and clearly.

To end the conversation, press the  button (12). The screen will display the call duration for 3 seconds, and then return to the previous mode.

Rejecting an Incoming Call

Touch the  button to reject an incoming call. The call will revert to your phone and can be answered directly or left for voice mail.

Volume Control

To increase or decrease the volume level, turn the **AUDIO** control (1) on the front panel or press the **VOL+ / VOL-** buttons on the remote control (15, 16).

Making an Outgoing Call

NOTE: *Press the  button from the main Bluetooth screen to automatically dial the last call received.*

1. Touch the button to open the direct dial screen.



2. Use the 0-9, *, and # buttons to input the phone number. Touch the C button to clear the last digit.
3. After entering the phone number, press the button to dial the call. The direct dial screen will close once your call is connected.


To end the conversation, press the button.

Call Transfer

While talking, to transfer audio from the head unit back to the mobile phone, touch the button (6). The TFT will display "Transfer". You can only transfer a call after it has been answered.



Menu List

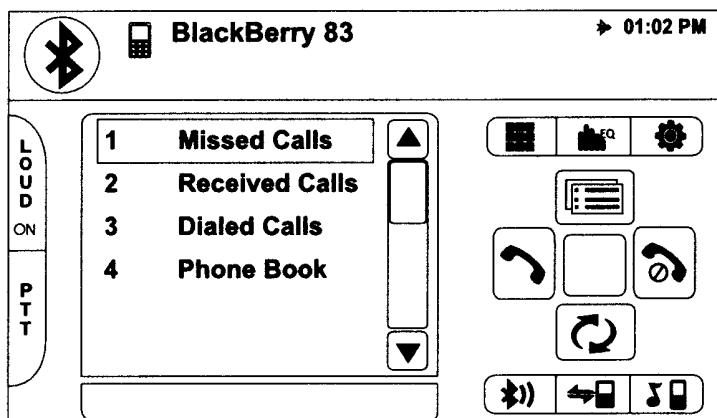The menu list appears on the left side of the screen and can be accessed from other modes by touching the button on the right side of the screen.





NOTE: Not all phones allow access to missed, received or dialed calls and some will not allow uploading of your phone's address book.



Missed Calls

The Missed Calls list retrieves the list of Missed numbers from your phone. The last missed number is the first number on the list. Touch the Missed Calls menu option to view the list. To make a call from the Missed Calls list, touch the number (the selected number appears at the top of the screen) and then touch the  button. The TFT will display "Unavailable" when the feature is not available. Touch the  button to return to the menu list.


Received Calls

Use the Received Calls list to view the last 10 received numbers stored on your phone. To access the Received list, touch the Received Calls menu option. The last received number is the first number on the list. To make a call from the Received Calls list, touch the number (the selected number appears at the top of the screen) and then touch the  button. The TFT will display "Unavailable" when the feature is not available. Touch the  button to return to the menu list.

Dialed Calls

The Dialed Calls list retrieves the list of dialed numbers from your phone. The last dialed number is the first number on the list. Touch the Dialed Calls menu option to view the list. To make a call from the Dialed Calls list, touch the number (the selected number appears at the top of the screen) and then touch the  button. The TFT will display "Unavailable" when the feature is not available. Touch the  button to return to the menu list.

Phone Book


1. Touch the Phone Book menu option to display the phone book stored on your mobile phone, if compatible.
2. Once the download is completed, you can use the arrow buttons and scroll bar on the right side of the window to navigate the list.
3. Touch to highlight the number you want to dial (the selected number appears at the top of the screen) and then touch the  button.

NOTE: Some mobile phones do not support Phone Book upload through Bluetooth. This is a limitation of the phone, not the VM9314.


Bluetooth Setup


Auto Answer

You can choose to have the VM9314 automatically answer incoming calls to your paired Bluetooth phone. To turn "Auto Answer" on:

1. Touch the  button to view the SETUP menu.
2. Select the "BT" sub-menu.
3. Touch the area to the right of "Auto Answer" to select "On".

Auto Connect

The auto Connect option will allow the VM9314 to automatically connect to your previously paired Bluetooth when it is in range. When the "Auto Connect" option is set to "Off", you must press the  button to re-establish a connection with your phone. To turn "Auto Connect" on:

1. Touch the  button to view the SETUP menu.
2. Select the "BT" sub-menu.
3. Touch the area to the right of "Auto Connect" to select "On".

Advanced Audio Distribution Profile (A2DP)

The VM9314 allows you to play back audio files from your phone, PDA or personal music player using a Bluetooth connection.

Before using an audio player, it may be necessary to enter a PIN code into the unit. Enter the PIN code referring to "BT (Bluetooth) Sub-menu Features" on page 26.

NOTE: Please quit A2DP mode before attempting to make a phone call, as unexpected results may occur depending on your mobile phone model.

The VM9314 can control a Bluetooth audio player via Advanced Audio Distribution Profile (A2DP) or Audio/Video Remote Control Profile (AVRCP). Bluetooth audio players (or Bluetooth adapters) compatible with these profiles can be connected to this unit. Functionality varies depending on the profile used.

REAR CAMERA FUNCTION

This unit is “camera ready.” Before accessing any camera features, you must install a rear video camera. When the camera is not installed and the function is accessed by gear selector being placed in reverse or by the unit’s menu, the message “NO VIDEO SIGNAL” will appear, indicating the function is not available.

When the camera is installed, the rear view image of what’s behind the vehicle will appear when the vehicle’s is placed in reverse gear. When leaving reverse gear, the unit displays the previous screen. The rear camera image can be adjusted from Normal to Mirror using the “Setup” menu (see “VIDEO Sub-menu Features” on page 25).

TROUBLESHOOTING

Table 13: Troubleshooting

Problem	Cause	Corrective Action
GENERAL		
Unit will not power on	Radio Fuse blown	Install new fuse with correct rating
	Car battery fuse blown	Install new fuse with correct rating
	Illegal operation	Press the RESET button located in the bottom right corner of the front panel
Remote control does not function	Battery depleted	Replace battery with new one
	Battery installed incorrectly	Remove battery and install correctly
No/low audio output	Improper audio output connection	Check wiring and correct
	Volume set too low	Increase volume level
	Improper "MUTE" connection	Review wiring diagram and check "MUTE" connection
	Speakers damaged	Replace speakers
	Heavily biased volume balance	Adjust the channel balance to the center position
	Speaker wiring is in contact with metal part of car	Insulate all speaker wiring connections
Poor sound quality or distortion	Pirated disc is in use	Use original copy
	Speaker power rating not compatible with unit	Connect proper speakers
	Speaker is shorted	Check speaker contact
Unit resets itself when engine is off	Incorrect connection between ACC and positive battery wire	Check wiring and correct
TFT MONITOR		
Monitor does not open automatically	TFT Auto Open is turned off	Turn TFT Auto Open on
No image	Incorrect connection to parking brake wire	Check wiring and correct
	Parking brake is not engaged	Stop vehicle in safe place and apply parking brake
Flashing image or interference appears on screen	DVD is not compatible with current TV system settings	Change setup to accommodate disc
	Improper video signal connections	Check wiring and correct

Table 13: Troubleshooting

Problem	Cause	Corrective Action
Prolonged image or improper height/width ratio display	Improper aspect ratio setup	Use correct aspect ratio setting
Monitor stops at incorrect position	Moving path is blocked	Press OPEN key to restart monitor movement
TUNER		
Weak station searching	Auto antenna is not fully extended	Connect the auto antenna control cable properly
	Auto antenna not properly connected	Connect the auto antenna control cable properly
	LOCAL function is activated	Turn LOCAL function off
Cannot insert disc	Disc already inside unit	Eject current disc and insert new one
Image blurred, distorted, or dark	Disc is illegally copied	Use original disc
Disc does not play back	Disc is warped or scratched	Use disc in good condition
	Disc is dirty or wet	Clean disc with soft cloth
	Laser pickup is dirty	Clean laser pickup with cleaning disc
	Incompatible disc is used	Use compatible disc
	Disc rating exceeds Parental Lock rating limit	Change Parental Lock settings to lower restriction
	Disc region code is not compatible with unit	Use disc with proper region code
	Disc is inserted upside down	Insert disc with label side up
PBC cannot be used during VCD playback	PCB is not available on the disc	
No repeat or searching while playing VCD	PCB is on	Turn PCB off
MP3		
Interruption occurred during playback	Disc is dirty or scratched	Clean disc or replace
	File is damaged/bad recording	Recreate disc with good files

Table 13: Troubleshooting

Problem	Cause	Corrective Action
Incorrect play-back message displayed	Message is longer than LCD can display	

Error Messages

Table 14: Error Messages

Message Displayed	Cause	Corrective Action
Loading	Disc is being read	
No Disc	Disc is dirty	Clean disc with soft cloth
	Disc is upside down	Insert disc with label side up
	Disc not present in loading compartment	Insert disc
Bad Disc	Disc is dirty	Clean disc with soft cloth
	Disc is upside down	Insert disc with label side up
Unknown disc	Disc format is not compatible with this unit	
Region Error	DVD is not compatible with region code of unit	
Error	Illegal mechanism operation	Press EJECT key for 5 seconds to reset loading mechanism

Care and Maintenance

1. Use only a clean silicone cloth and neutral detergent to clean the front panel or monitor. A rough cloth and non-neutral detergent (such as alcohol) may result in scratching or discoloration.
2. Do not get water or cleaning fluids on the unit.
3. If the temperature inside the player gets too hot, a protective circuit automatically stops play of the disc. If this occurs, allow the unit to cool before operating the player again.
4. Never insert anything other than a 5" (12 cm) compact disc into the player as the mechanism can be damaged by foreign objects.
5. Do not attempt to use a 3" (8 cm) CD-Single disc in this unit, either with or without an adaptor, as damage to the player and/or disc may occur. Such damage is not covered by the Warranty on this product.
6. The CD player may not operate properly in extreme hot or cold. If such conditions occur, allow the interior of the vehicle to reach a normal temperature before using player.
7. When the vehicle warms up during cold weather or under damp conditions, condensation may appear on the LCD panel. Should this occur, the screen will not operate properly until the moisture has evaporated.
8. We suggest you use a cleaning disc in this unit more frequently than in the unit in your home due to the environmental conditions of the vehicle.

SPECIFICATIONS

DVD/CD Player

Compatible Disc Media: DVD \pm R / RW (Single and Dual Layer) and CD-R / RW

Compatible Media Formats: CD-DA, MP3, WMA, VCD, SVCD, Xvid, AVI, MPEG1 / 2

Signal to Noise Ratio: >95dBA

Dynamic Range: >95dB

Frequency Response: 20Hz to 20 kHz, -3dB

Channel Separation: > 60dB @ 1 kHz

D/A Converter: High performance 24-bit / 192 kHz sample rate, Multi-Bit Sigma-Delta Modulator

Video

Format: NTSC, PAL (auto-detection)

Output: 1Vp-p (75-ohm)

Input: 1Vp-p (75-ohm)

FM Analog Tuner

Tuning Range: 87.5MHz - 107.9MHz

Mono Sensitivity (-30dB): 9dBf

Quieting Sensitivity (-50dB): 15dBf

Alternate Channel Selectivity: 70dB

Signal to Noise Ratio @ 1 kHz: 58dB

Image Rejection: 80dB

Stereo Separation @ 1 kHz: >30dB

Frequency Response: 30Hz - 15 kHz, -3dB

HD Radio Tuner

FM: Hybrid -89 dBm, (40 dBf), All Digital -112 dBm (17dBf)

AM: Hybrid -93, dBm, (36 dBf) All Digital -103 dBm (25dBf)

Stereo Separation: 70 dB

Audio THD: .4%

Frequency Response (+/-3dB) 20 Hz - 18 kHz

Signal-to-Noise Ratio (Stereo): 70 dB

AM Tuner

Tuning Range: 530 kHz - 1710 kHz

Sensitivity (-20dB): 12uV

Signal to Noise Ratio @ 1 kHz: 50dB

Image Rejection: 60dB

Frequency Response: 150Hz - 2 kHz, -3dB

Monitor

Screen Size: 7" TFT Active Matrix LCD

Resolution: 1,152,000 Sub Pixels (480 x 2400)

General

Auxiliary Input impedance: 10k

Power Supply: 11 to 16VDC, negative ground

Power Antenna (Blue): 500mA max, current limited protection

Amplifier Remote (Blue/White): 500mA max, current limited protection

Operating Temperature: -20C ~ 65C

Fuse: 15-amp, mini ATM type

DIN chassis dimensions: 7" X 7" X 2" (178mm x 178mm x 50mm)

CEA Power Ratings

Power Output: 13 Watts RMS x 4 channels into
4-Ohms @ $\leq 1\%$ THD+N

Signal to Noise Ratio: 70dBA below reference
(Reference: 1 Watt, 4-Ohms)

Frequency Response: 20 Hz - 20 kHz, -3dB.
(Aux Input used as reference input)

Reference Supply Voltage: 14.4VDC


**Specifications subject to change without notice.*





Audiovox Electronics Corporation
Hauppauge, NY 11788
Technical Assistance: 1-800-323-4815
www.jensen.com

© 2010 Audiovox
Ver. 050310
Printed in China
P/N:127075002477

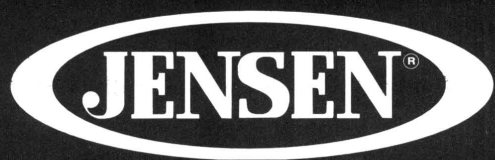

VM9314



What's in the Box

VM9314 Head Unit
Single DIN Sleeve
Wiring Harness
Parking Brake Sensor Extension Wire
Mounting Hardware
3 Voice control microphone
with mounting brackets

Cosmetic Trim Ring
Remote Control with Battery
3.5mm to 3.5mm Media Adaptor Cable
Owners Manual
Installation Guide

Tools and Supplies

You will need these tools and supplies to install your VM9314:

- Torx type, flat-head and Philips screwdrivers
- Wire cutters and strippers
- Tools to remove existing radio (screwdriver, socket wrench set or other tools)
- Electrical tape
- Crimping tool
- Volt meter/test light
- Crimp connections
- 18 gauge wire for power connections
- 16 – 18 gauge speaker wire

WARNING! Never install this unit where operation and viewing could interfere with safe driving conditions.

Optional Equipment

- **NAV102:** Allows you to access navigation features. All installation and operating instructions are included with the navigation module.
- **BTM15:** Allows you to connect to a Bluetooth enabled cell phone or other device.
- **Rear Camera**

Disconnecting the Battery


To prevent a short circuit, be sure to turn off the ignition and remove the negative (-) battery cable prior to installation.

NOTE: If the VM9314 is to be installed in a car equipped with an on-board drive or navigation computer, do not disconnect the battery cable. If the cable is disconnected, the computer memory may be lost. Under these conditions, use extra caution during installation to avoid causing a short circuit.

Pre-installation

- 1** Remove the four screws that attach the mounting sleeve to the radio and remove the sleeve.
- 2** Install the mounting sleeve.
 - a. Install mounting sleeve into the dashboard or optional adapter. Do not force the sleeve into the opening or cause it to bend or bow.
 - b. Locate the series of bend-tabs along the top, bottom and sides of the mounting sleeve. With the sleeve fully inserted into the dashboard opening, bend as many of the tabs outward as necessary so that the sleeve is firmly secured to the dashboard.
 - c. Install support strap to make the unit more stable.
- 3** Place the radio in front of the dashboard opening so the wiring can be brought through the mounting sleeve.

CAUTION! Be careful not to damage the car wiring.

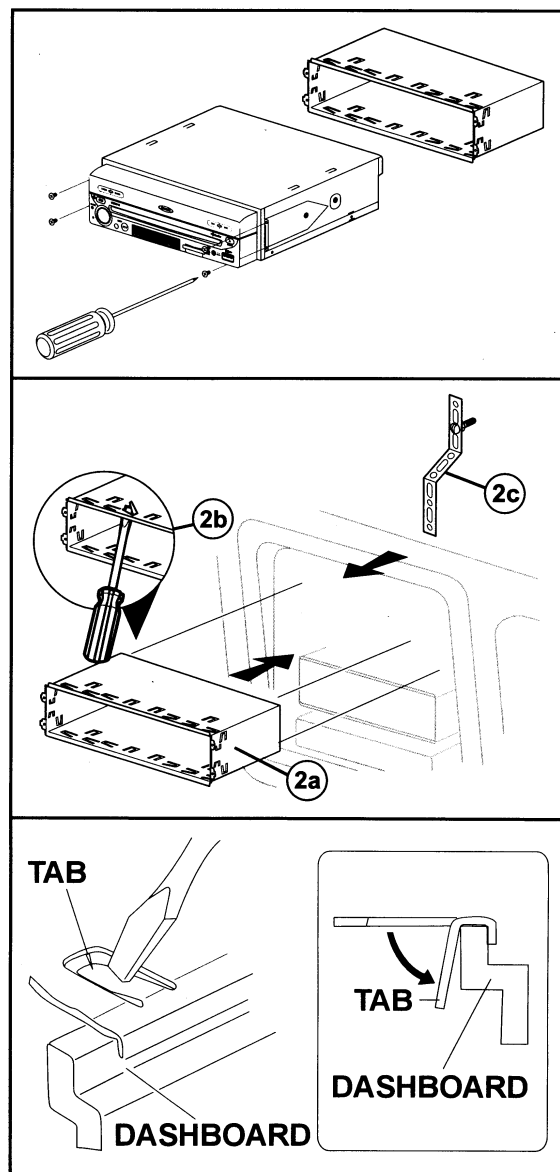

Wiring

WARNING! Only connect the unit to a 12-volt power supply with proper grounding.


Complete wiring as illustrated in the wiring diagram on page 4. Once the wiring is complete, reconnect the battery negative terminal. If there is no ACC available, connect the ACC lead to the power supply with a switch.

NOTE: When replacing a fuse, be sure to use correct type and amperage to avoid damaging the radio. The VM9314 uses one 15 amp fuse, located in the black filter box in-line with the main wire harness.

Final Installation

After completing the wiring connections, turn the unit on to confirm operation (ignition switch must be on). If unit does not operate, recheck all wiring until problem is corrected. Once proper operation is achieved, turn off the ignition switch and proceed with final mounting of the chassis.


- 1** Connect wiring adapter to existing wiring harness.
- 2** Connect antenna lead.
- 3** Carefully slide the radio into the mounting sleeve, making sure it is right-side-up, and secure with the original 4 screws.
- 4** Attach one end of the perforated support strap (supplied) to the screw stud, which is screwed into the threaded insert on the back of the unit, using the hex nut provided. Fasten the other end of the perforated strap to a secure part of the dashboard either above or below the radio using the screw and hex nut provided. Bend the strap to position it as necessary.
- 5** Replace any items you removed from the dashboard.

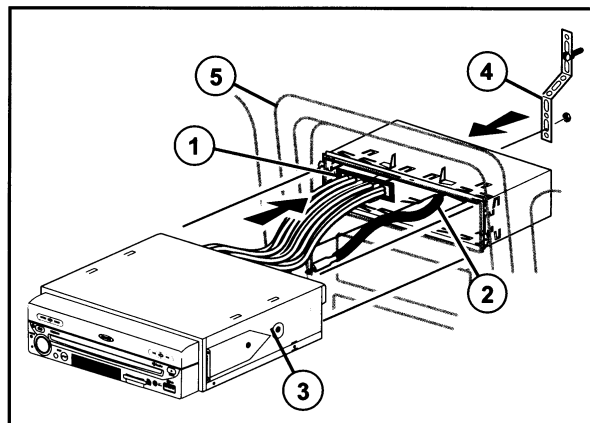

CAUTION! The rear of the radio must be supported with the strap to prevent damage to the dashboard from the weight of the radio or improper operation due to vibration.

ISO-DIN Installation

- 1** Remove mounting sleeve brackets.
- 2** Remove trim ring.
- 3** Mount factory brackets on new radio using existing screws from old radio.
- 4** Slide radio chassis into dash opening and secure.
- 5** Re-install dash panel.

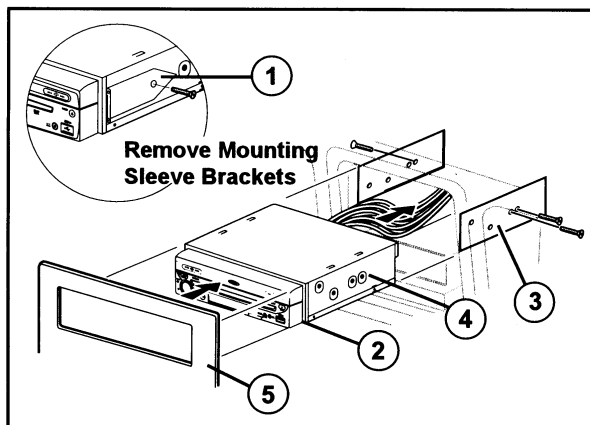

NOTE: For proper operation of the CD/DVD player, the chassis must be mounted within 20° of horizontal. Make sure the unit is mounted within this limitation.


Wiring Diagram

IMPORTANT: Incorrect wiring connections can damage the unit. Follow the wiring instructions carefully, or have the installation handled by an experienced technician.

For basic iPod connectivity, you can use the white 30-pin to USB iPod cable that came with your Apple device. For iPod video or photo playback, you must purchase the jLink-USB cable.

Need Help?

For technical assistance, call the Jensen customer support line at 1-800-323-4815.

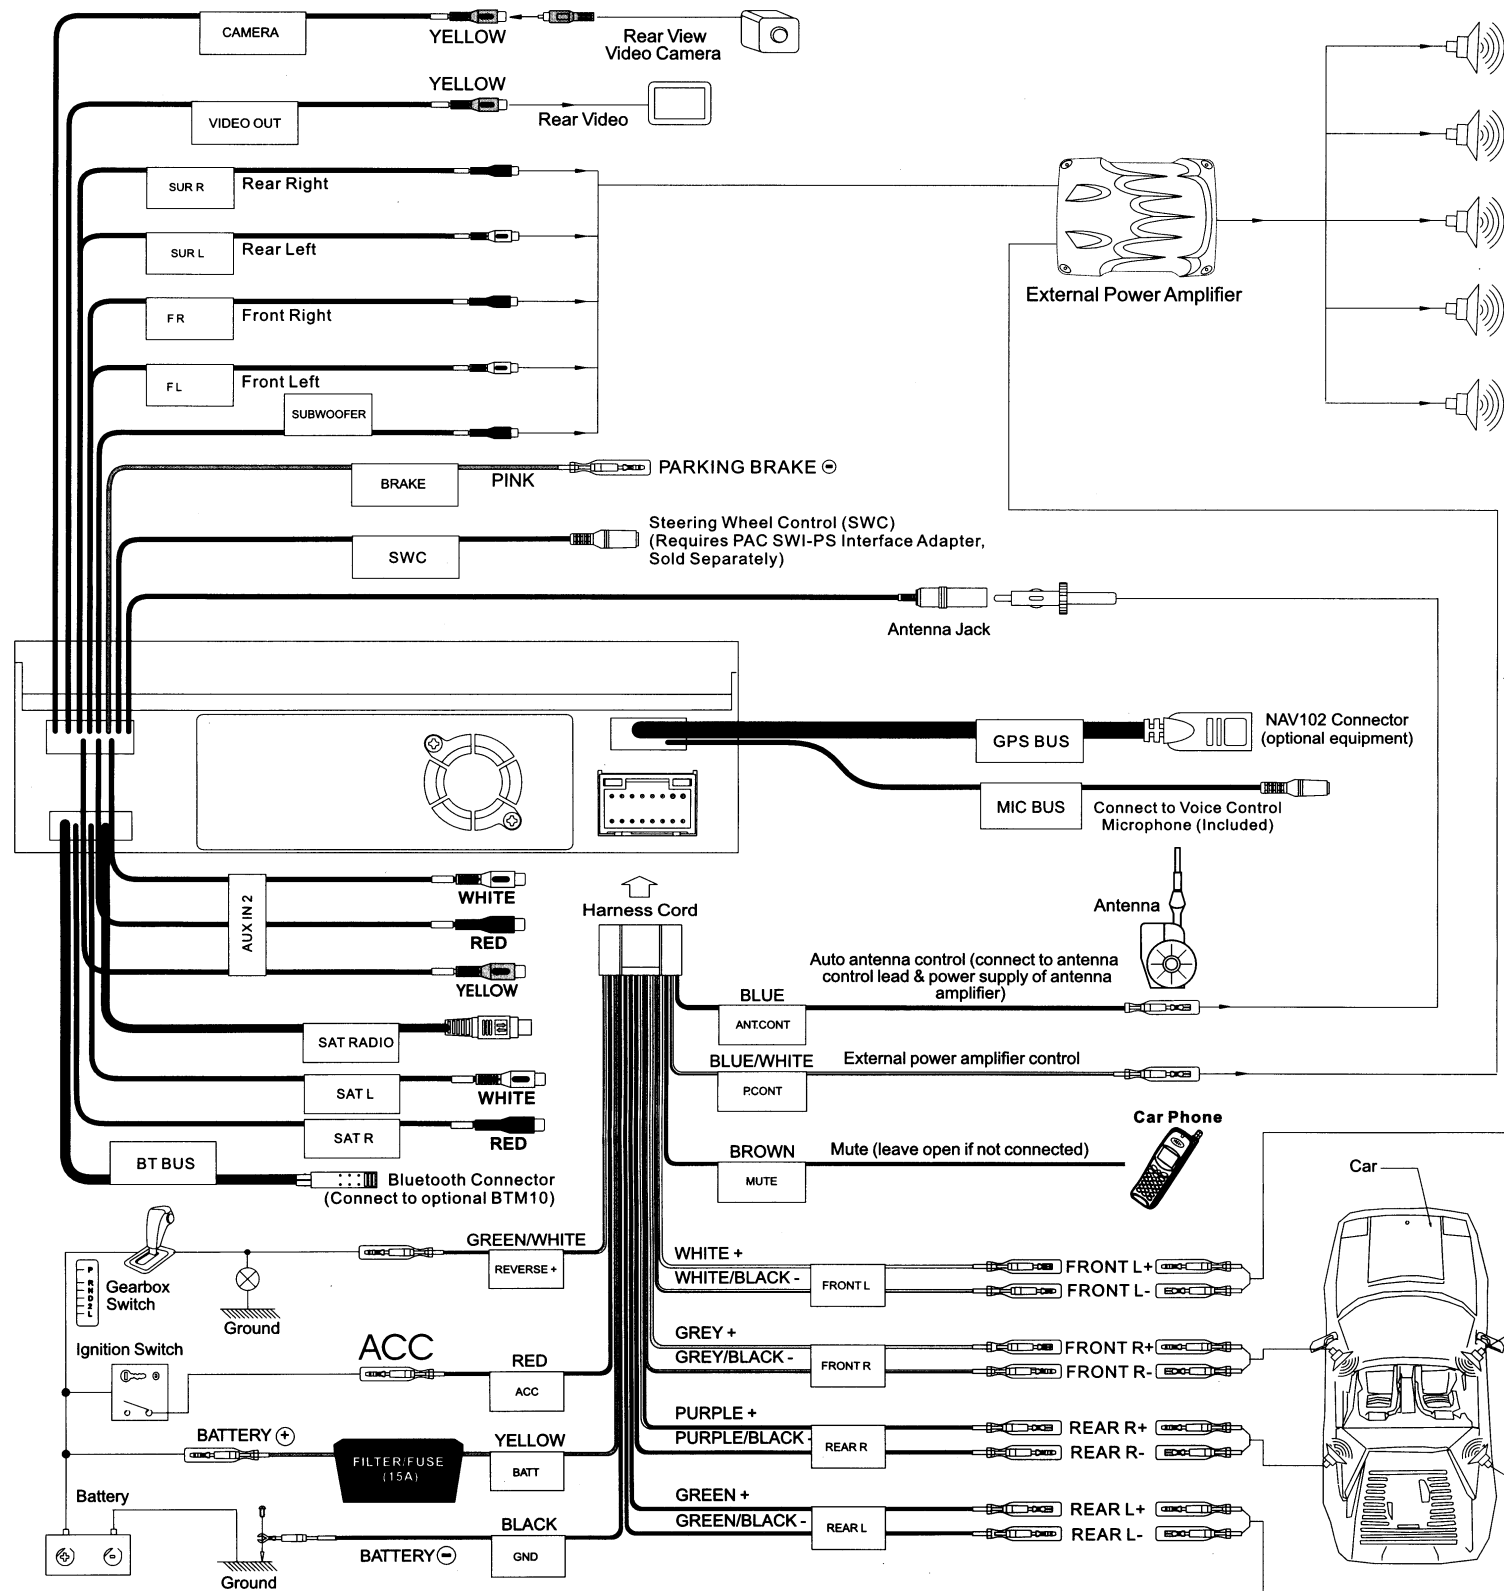

VM9314 / VM9324 Software Update Notice for Voice Recognition

Congratulations on purchasing the Jensen VM9314 / VM9324 Multimedia Receiver w/ voice control. In addition to controlling the basic functions of the system with simple commands, your VM9314 / VM9324 allows you to request music from your iPod™/ iPhone™ library using natural speech commands. If you use an iPod touch™ or an iPhone™, you can greatly enhance your speech recognition experience by downloading the free **"Jensen 9300 Series QuickSpeech"** app from the Apple App Store™. This app collects your iPod / iPhone music library information quickly (Indexing) and synchronizes it to your Jensen VM9314 / VM9324. If you have a large library in excess of 1000 files, using this app lets you begin to use speech recognition in a matter of seconds rather than waiting for upwards of several minutes if you do not use the app.

How to get and use the "Jensen 9300 Series QuickSpeech" app:

1. Go to the Apple App Store and download the "Jensen 9300 Series QuickSpeech" app. It's free!!
2. After synching your iPod touch™ / iPhone™ music library information with iTunes, disconnect your iPod touch / iPhone from your computer and run the Jensen 9300 Series QuickSpeech app. The app provides you with progress information as it runs and no user interaction is required.
3. When the QuickSpeech app displays "Ready to upload QuickSpeech data", exit the app.
4. When you connect your device to your Jensen VM9314 / VM9324, run the "Jensen 9300 Series QuickSpeech" app again.
5. Within a few seconds, your Jensen VM9314 / VM9324 will display a screen indicating that your speech recognition information is being updated. Note: The first time you connect your iPod touch / iPhone, software updates may get applied. Please follow the instructions on the screen.
6. When the QuickSpeech application finishes, your Jensen VM9314 / VM9324 will return to the iPod™ source screen.
7. Exit the app on the iPod touch™/ iPhone™.

Although you can run the "Jensen 9300 Series QuickSpeech" app whenever you want, you only need to run it when you re-synch your device with iTunes™ or download new content from the iTunes store.

NOTE:

The "Jensen 9300 Series QuickSpeech" app also has the ability to update your VM9314 / VM9324 with the latest operating software. To enable this feature, all you have to do is:

- a) If you are using an iPhone™ with a 3G connection you don't need to do anything. It will all happen automatically. The application will tell you that it is getting downloads and notify you when the download is complete.
- b) If you use an iPod touch™, ensure your Wi-Fi is turned on and connected to a valid wireless source while running the application. Updates will be installed automatically. The application will tell you that it is getting downloads and notify you when the download is complete.

We suggest that you keep your device up to date with the latest updates from Apple and strongly recommend upgrading to the latest iPod touch / iPhone operating system (Version 4) to get the best performance possible.

The "Jensen 9300 Series QuickSpeech" application is compatible with iPod touch™ / iPhone™ operating system version 3 or later. To check your operating system's version, select 'Settings', 'General', 'About' then 'Version'. The first number of the 'Version' denotes which operating system you have. If it says 3 or 4 the Jensen 9300 Series QuickSpeech application will operate correctly.

VM9314 / VM9324 Software Update Notice for Internet Radio

Congratulations on purchasing the Jensen VM9314 / VM9324. These products are compatible with specially-designed iPhone™ applications allowing you to see and control your iPhone™ application on your vehicle system's video display while listening to media. The Jensen 9300 Series Internet Radio app is available from the Apple App Store™ free of charge. The Internet Radio app offers a huge variety of music, talk, news and sports channel choices from all over the world. It's fun, intuitive and easy to use. The best part is that you can take advantage of your iPhone's™ 3G internet connection to stream content directly to your vehicle multimedia system.

How to get and use the "Jensen 9300 Series Internet Radio" app:

1. Download the Jensen 9300 Series Internet Radio app from the Apple App Store™
2. Launch the application and enjoy the content you wish to listen to
3. When you connect your iPhone™ to the VM9314 / VM9324, while the app is running, you will see the app appear on your VM9314 / VM9324 screen and hear the station through your vehicle's system.
4. When you exit the application on either the iPhone™ or the VM9314 / VM9324, the screen will return you to the iPod™ screen.

If you disconnect the iPhone™ from the VM9314 / VM9324 while the Jensen 9300 Series Internet Radio app is still running, the station you were listening to will continue playing on your iPhone™. This lets you enjoy a seamless musical experience inside and outside your vehicle.

You can also launch the Jensen 9300 Series Internet Radio app while connected to the in-vehicle system in which case the VM9314 / VM9324 will automatically display the app on your multimedia system and music will stream through your vehicle's system.

NOTE:

1. You can connect or disconnect your iPhone™ at any time while the app is running without harming either your iPhone™ or VM9314 / VM9324. The system is "hot swappable".
2. The Jensen 9300 Internet Radio app has the ability to update your VM9314 / VM9324 with the latest operating software. All this happens automatically and the app will tell you that it is installing updates. Occasionally, you may be asked to re-boot your VM9314 / VM9324. Please follow the instructions for best results.

We suggest that you keep your iPhone™ up to date with the latest updates from Apple and strongly recommend upgrading to the latest iPhone™ operating system (Version 4) to get the best performance possible.



**DO NOT RETURN THIS PRODUCT TO THE RETAIL STORE!
FOR ASSISTANCE, PLEASE CALL: 1.800.323.4815 OR VISIT
OUR WEBSITE: WWW.JENSEN.COM**

InstallerNet
"Leave the Installation to us"

PROFESSIONAL INSTALLATION OR DIY INSTALLATION INSTRUCTIONS



Do-it-Yourself with
our easy instructions



If you can't do it on your own, we have the professionals here to help!



- ▶ Online Scheduling
- ▶ Customer Service
- ▶ Certified Installers
- ▶ The Right Tools



Need Professional Installation?

InstallCard
installation to go



Patent Pending

Choose DIY or Professional Installation





PROFESSIONAL INSTALLATION* OR DIY SERVICES

*separate purchase required

Online Scheduling



Customer Service



Certified Installers



The Right Tools



InstallerNet
"Leave the Installation to us"

Including In-Car Product Demonstration

DO-IT-YOURSELF INSTALLATION SUPPORT

- + Download Instructions Day or Night 24-7
- + Easy-to-follow instructions just a click away
- + Professional Installation services available if needed*

*SEPARATE PURCHASE REQUIRED

THE PROFESSIONAL INSTALLATION ADVANTAGE

- + Friendly Customer Service available 24-7
- + Certified Installers
- + Lifetime Warranty on your Installation
- + Convenient Online Scheduling

INCLUDES BASIC INSTALLATION IN MOST VEHICLES

Visit www.Jensen.InstallCard.com for more information

? Questions or Comments
e-mail: service@InstallerNet.com

InstallerNet
(800) 950-9869

NOT VALID FOR RETURN IF INSTALLCARD IS DETACHED

How to Activate your **InstallCard** and Choose DIY or Schedule Installation

- 1 Visit www.Jensen.InstallCard.com
- 2 Choose DIY or Schedule Installation
- 3 Enter the InstallCard Number below
- 4 Download your instructions or Schedule your installation

InstallCard No:

managed by
InstallerNet
(800) 950-9869

After activating this InstallCard, you may use it to install your mobile electronics product at any of our authorized InstallerNet member locations nationwide. Some vehicles will require additional parts or labor which may be purchased separately at time of installation. Lifetime warranty on installation for as long as you own the vehicle. This InstallCard is valid up to one year from date of purchase where permitted by law. Visit www.InstallCard.com for more information. NOT VALID UNTIL PURCHASED.



35 FREE SONGS

+1 FREE AUDIOBOOK

- Choose from over 6 million songs and 6,000+ audiobooks
- DRM-free MP3 tracks play on your computer or any MP3 player
- Free 14-day trial – Cancel anytime, keep your downloads

REDEEM YOUR FREE MP3s HERE:



www.emusic.com/jensen35



Get up to 35 music downloads and 1 audiobook download free with 14-day eMusic trial subscriptions. Offers available to first time eMusic customers only, located in the USA. Separate subscriptions required. Audiobook offer valid for one audiobook credit; some titles require multiple credits for download. Certain songs will not be available during your free trial. Internet access, registration and credit or debit card required. Limited time offers. You will automatically become a paying member unless you cancel your subscriptions before the end of your free trial or before you exceed your free trial downloads. Offers and eMusic's prices are subject to change without notice and are subject to eMusic's terms of use. eMusic and the eMusic logo are either trademarks or registered trademarks of eMusic.com Inc. in the U.S.A. and other countries. All rights reserved. eMusic is not responsible for products, services or claims made by Jensen or Audiovox Corporation.

35 CHANSONS GRATUITES + 1 LIVRE AUDIO GRATUIT

Sélectionnez parmi 6 millions de chansons et plus de 6 000 livres audio • Les pistes MP3 sans DRM peuvent être écoutées sur votre PC ou n'importe quel lecteur MP3 • Essai gratuit pendant 14 jours - Annulez quand vous voulez et conservez vos téléchargements

ENREGISTREZ-VOUS À :

▶ | www.emusic.com/jensen35

35 CANCIONES GRATUITAS + 1 AUDIOLIBRO SIN CARGO

Elija entre más de 6 millones de canciones y más de 6.000 audiolibros • Reproduzca pistas para MP3 sin GDD en su PC o en cualquier reproductor de MP3 • 14 días de prueba sin cargo. Se puede cancelar en cualquier momento y conservar los archivos descargados

REGISTRARSE:

▶ | www.emusic.com/jensen35

Obtenez jusqu'à 35 chansons et 1 livre audio avec des abonnements d'essai gratuit de eMusic d'une durée de 14 jours. Ces offres sont disponibles aux nouveaux clients d'eMusic uniquement situés aux USA. Abonnements séparés requis. L'offre d'un livre audio gratuit n'est valable que pour les livres audio demandant 1 crédit ; certains titres nécessitent plus d'un crédit. Certaines chansons ne sont pas disponibles pendant l'essai gratuit. Vous devez disposer d'un accès à Internet, vous enregistrer et indiquer une carte de crédit/débit. Offres à durée limitée. Les offres et les prix d'eMusic sont soumis aux termes d'utilisation d'eMusic et peuvent changer sans préavis. eMusic et le logo eMusic sont soit des marques déposées soit des marques de commerce d'eMusic.com Inc. aux États-Unis et dans d'autres pays. Tous droits réservés. eMusic n'est pas responsable des produits, services ou réclamations faites à l'encontre de Audiovox Corporation. • Obtenga hasta 35 descargas de música y 1 audiolibro en forma gratuita al suscribirse a una cuenta eMusic durante 14 días de prueba sin cargo. Ofertas disponibles sólo para quienes son clientes de eMusic por primera vez ubicada en los USA. Se requieren inscripciones separadas. La oferta del audiolibro es válida sólo por un crédito para audiolibros; se requiere más de un crédito para descargar algunos títulos. Algunas canciones no estarán disponibles durante el periodo de prueba sin cargo. Se requiere acceso a Internet, inscripción y tarjeta de crédito o de débito. Ofertas por tiempo limitado. Las ofertas y los precios de eMusic se encuentran sujetos a los términos de uso de eMusic y pueden ser modificados sin previo aviso. eMusic y el logo de eMusic son marcas comerciales o marcas registradas de eMusic.com Inc en los Estados Unidos y en otros países. Todos los derechos reservados. eMusic no es responsable de productos, servicios o reclamos efectuados por Audiovox Corporation.

if it's too
LOUD

JENSEN

you're too
OLD!

Limited Warranty

CD or Multimedia Radios/Headunits

DO NOT RETURN THIS PRODUCT TO THE STORE

Audiovox Electronics Corporation ("the Company") is committed to quality and customer service, and are pleased to offer you this Warranty. Please read it thoroughly and contact the Company at 1-800-323-4815 with any questions.

Who is covered?

The Company extends this warranty to the original retail purchaser of products purchased through an authorized Audiovox retailer in the U.S.A., Puerto Rico or Canada. This warranty is not transferable or assignable. Proof of purchase is required in the form of an original sales receipt.

What is covered?

The Company warrants that should this product or any part thereof, under normal use, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with a new or reconditioned product (at the Company's option) without charge for parts and repair labor.

What is not covered?

This Warranty *does not* cover the following:

- Damage incurred during shipping or transporting the product to the Company or a service center
- Elimination of car static or motor noise
- Defects in cosmetic, decorative or non-operative structural parts
- Correction of antenna problems
- Costs incurred for installation, removal or reinstallation of the product
- Consequential damage to compact discs, USB devices, digital media cards, accessories or vehicle electrical systems
- Damage caused by improper installation, mishandling, misuse, neglect, accident, blown fuse, battery leakage, theft or improper storage
- Products whose factory serial number/bar code label(s) or markings have been removed or defaced
- Damage resulting from moisture, humidity, excessive temperature, extreme environmental conditions or external natural causes

Please review the "Care and Maintenance" section of your Installation and Operation Manual for additional information regarding the proper use of your product.

Limitations

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Warranty Service

- To obtain repair or replacement within the terms of this Warranty, call 1-800-323-4815 for the location of a warranty station serving your area.
- You must prepay the initial shipping charges to the Company. The Company will pay the return shipping charges for all warranted products returned to an address within the U.S.A., Puerto Rico or Canada.
- Please package the product securely to avoid shipping damage. We recommend using a carrier that provides tracking service to prevent lost packages. Lost or damaged packages are not covered by this warranty.
- Provide a detailed description of the problem(s) for which you require service.

Garantía Limitada

Radios del CD o de los Multimedia

NO RETORNE ESTE PRODUCTO A LA TIENDA

Audiovox Electronics Corporation ("la Compañía) es una corporación comprometida con la calidad y el servicio al cliente, y se complace en ofrecerle esta Garantía. Por favor, léala completamente y contacte a la Compañía al 1-800-323-4815 por cualquier duda.

¿Quién está cubierto?

La Compañía extiende esta garantía al comprador minorista original de los productos comprados a un distribuidor Audiovox autorizado en USA, Puerto Rico o Canadá. Esta garantía no es transferible o asignable. Se requiere prueba de compra en forma de recibo de venta original.

¿Qué está cubierto?

La Compañía garantiza que si este producto o cualquier parte del mismo, bajo uso normal, se prueba que tiene defectos en materiales o mano de obra dentro de los 12 meses desde la fecha de compra original, dichos defectos serán reparados o reemplazados con un producto nuevo o reacondicionado (a opción de la Compañía) sin costos por repuestos o por labor de reparación.

¿Qué no está cubierto?

Esta Garantía *no cubre* lo siguiente:

- Daños ocurridos durante el envío o transporte del producto a la Compañía o al centro de servicio
- Eliminación de estática o ruido de motor
- Defectos en cosmética, partes estructurales decorativas o no operativas
- Corrección de problemas de antena
- Costos incurridos por instalación, retiro o reinstalación del producto
- Daños consecuentes a discos compactos, dispositivos USB, tarjetas multimedia digitales, accesorios o sistemas eléctricos del vehículo
- Daños causados por instalación inadecuada, mal manejo o uso, negligencia, accidentes, fusibles quemados, goteras en la batería, robo o almacenamiento inadecuado.
- Productos cuyo número de serie o código de barra de fábrica o sus marcas hayan sido quitados o borrados
- Daños resultantes de la humedad, temperatura excesiva, condiciones medioambientales extremas o causas naturales externas

Por favor, revea la sección “Cuidados y Mantenimiento” de su Manual de Instalación y Operación para obtener información adicional relacionada al uso adecuado de su producto.

Limitaciones

LA EXTENSIÓN DE LA RESPONSABILIDAD DE LA COMPAÑÍA BAJO ESTA GARANTÍA SE LIMITA A LA REPARACIÓN O REEMPLAZO PROVISTO ARRIBA Y, EN NINGÚN CASO, EXCEDERÁ LA RESPONSABILIDAD DE LA COMPAÑÍA EL PRECIO DE COMPRA PAGADO POR EL COMPRADOR DEL PRODUCTO.

Esta Garantía está en lugar de todas las otras garantías o responsabilidades. CUALQUIER GARANTÍAS IMPLICADAS, INCLUYENDO CUALQUIER GARANTÍA IMPLICADA DE MERCANTIBILIDAD, SERÁ LIMITADA A LA DURACIÓN DE ESTA GARANTÍA ESCRITA. CUALQUIER ACCIÓN POR INCUMPLIMIENTO DE CUALQUIER GARANTÍA AQUÍ ESPECIFICADA INCLUIDA CUALQUIER GARANTÍA IMPLÍCITA DE MERCANTIBILIDAD DEBE SER LLEVADA A CABO DENTRO DE UN PERÍODO DE 24 MESES DESDE LA FECHA DE COMPRA ORIGINAL. EN NINGÚN CASO LA COMPAÑÍA SERÁ RESPONSABLE POR NINGÚN DAÑO CONSECUENTE O INCIDENTAL POR INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLICADA, DE NINGUNA FORMA. No se autoriza a ninguna persona o representante a asumir por parte de la Compañía ninguna responsabilidad diferente a la aquí expresada en conexión con la venta de este producto.

Algunos estados no permiten limitaciones sobre el tiempo de duración de una garantía implicada o de la exclusión o limitación de daños incidentales o consecuentes, entonces las limitaciones y exclusiones antes mencionadas pueden no aplicarle a usted. Esta Garantía le da derechos legales específicos y usted también puede tener otros derechos que pueden variar de estado en estado.

Obteniendo el Servicio de Garantía

- Para obtener reparación o reemplazo dentro de los términos de esta Garantía, llame al 1-800-323-4815 por la ubicación de un servicio de garantía en su área.
- Usted debe pagar previamente los costos de envío inicial a la Compañía. La Compañía pagará los costos de envío de retorno de todos los productos en garantía enviados a direcciones dentro de USA, Puerto Rico o Canadá.
- Por favor empaque el producto de forma segura para evitar daños en el transporte. Recomendamos usar una empresa de transporte que provea servicio de rastreo para prevenir la pérdida de paquetes. Paquetes perdidos o dañados no están cubiertos por esta garantía.
- Provea una descripción detallada del problema o problemas por los cuales usted requiere servicio.

Garantie Limitée

Radios CD ou Multimédia / Unités principales

Audiovox Electronics Corporation (la Société) s'engage à la qualité et au service des clients, et est content de vous offrir cette garantie. Nous vous prions de le lire attentivement et prendre contact avec la Société au 1-800-323-4815 avec des questions.

Qui est couvert ?

La Société étend cette garantie à l'acheteur d'origine en détail des produits achetés à un détaillant autorisé d'Audiovox aux États-Unis, Puerto Rico ou Canada. Cette garantie ne peut pas être transférée ni aliénée. Preuve d'achat est exigée sous forme du récépissé de vente d'origine.

Ce qui est couvert ?

La Société garantit que si ce produit ou une partie de ce produit, sous l'utilisation normale par l'acheteur d'origine, dans des conditions normales, s'avère défectueux en matériel ou en artisanat, dans 12 mois depuis la date d'achat d'origine, de tels défauts seront réparés ou remplacés avec un nouveau produit ou un produit reconditionné (à la seule discrétion de la société) sans frais pour les pièces de rechange ou le travail réparateur.

Ce qui n'est pas couvert ?

Cette garantie *ne* couvre pas le suivant :

- Des dommages survenus lors de la transportation de ce produit à la Société ou à un centre d'entretien.
- Elimination des parasites de voiture ou le bruit du moteur
- Des défauts dans des parties cosmétiques, décoratives ou structurelles non-opératives
- Rectification des problèmes d'antenne
- Le coût de l'installation, de l'enlèvement ou de la réinstallation du produit
- Dommages indirects aux disques compacts, des engins USB, des cartes de média digitales, des accessoires ou le système électrique du véhicule
- Des dégâts survenus à cause de la manipulation mauvaise, l'installation incorrecte, mauvaise utilisation, négligence, des accidents, des fusibles sautés, fuite de la pile, du vol et du stockage incorrect
- Produits soumis à l'enlèvement ou la dégradation du numéro de série d'usine/étiquettes de code à barres ou des marquages.
- Des dégâts survenus à cause de la moisissure, l'humidité, des températures excessives, des conditions environnementales extrêmes ou des causes naturelles externes

Veillez revoir la section Soins et Entretien de votre Guide d'Opération, pour avoir des informations supplémentaires quant à la bonne utilisation de votre produit.

Limitations

LA MESURE DE LA RESPONSABILITÉ DE LA SOCIÉTÉ SOUS CETTE GARANTIE EST LIMITÉE À LA RÉPARATION OU REMPLACEMENT MENTIONNÉS CI-DESSUS ET DANS AUCUN CAS LA RESPONSABILITÉ DE LA SOCIÉTÉ N'EXCÉDERA LE PRIX D'ACHAT PAYÉ PAR L'ACHETEUR POUR CE PRODUIT.

Cette garantie tient lieu de toute autre garantie ou responsabilité expresses. TOUTE GARANTIE IMPLIQUÉE, Y COMPRIS UNE GARANTIE IMPLIQUÉE DE MARCHANDABILITÉ, SERA LIMITÉE À LA DURÉE DE CETTE GARANTIE ÉCRITE. TOUTE ACTION POUR RUPTURE D'UNE GARANTIE QUELCONQUE SOUS LA PRÉSENTE, Y COMPRIS TOUTE GARANTIE IMPLIQUÉE DE MARCHANDABILITÉ DOIT ÊTRE PORTÉE DANS UNE PÉRIODE DE 24 MOIS DEPUIS LA DATE D'ACHAT D'ORIGINE. EN AUCUN CAS LA SOCIÉTÉ NE SERA RESPONSABLE POUR TOUT DOMMAGE INDIRECT OU ACCESSOIRE POUR RUPTURE DE CETTE GARANTIE OU TOUTE AUTRE GARANTIE, EXPRESSE OU IMPLIQUÉE. Aucune personne ni un représentant n'est autorisée d'assumer de la part de la société une responsabilité autre que celle exprimée ici relatif à la vente de ce produit.

Certains états ne permettent pas de limitations sur la durée d'une garantie impliquée ou sur l'exclusion ou la limitation des dommages indirects et accessoires, tels que les informations ci-dessus ne s'appliquent pas à vous. Cette garantie vous donne des droits légaux spécifiques et vous pouvez aussi jouir d'autres droits qui varient d'état à l'état.

Obtenir le service de garantie

- Pour obtenir la réparation ou le remplacement dans les termes de cette garantie, appelez 1-800-323-4815 pour avoir l'emplacement d'une station de garantie qui dessert votre région.
- Si le produit est envoyé pour un service de garantie vous devez payer les frais de transportation de départ. La Société payera la transportation de retour pour tout produit sous garantie si le produit est retourné à une adresse située aux États-Unis, Puerto Rico ou Canada.
- Assurez-vous que le produit soit bien emballé pour éviter des accidents pendant la transportation. Nous recommandons un transporteur qui fournisse un service de dépistage pour éviter la perte des paquets. Des paquets perdus ou endommagés ne sont pas couverts par cette garantie.
- Fournissez une description détaillée des problèmes que vous voulez faire résoudre par le service de garantie.